



TIMING SOLUTIONS

Rubidium Series



RUB SL

LTC Monitoring and Changeover Module



Functional Description and Specifications
Supplement to the "Installation & Systems Manual RUBIDIUM SERIES"
Version: 4.4
January 12, 2024





CONTENTS

| | | |
|----------|---|-----------|
| A1 | REVISION HISTORY | |
| A2 | COPYRIGHT | |
| A3 | GENERAL REMARKS | |
| 1 | MODULE “SL” | 7 |
| 1.1 | GENERAL DESCRIPTION | 7 |
| 1.2 | REAR PANEL AND CONNECTIONS | 8 |
| 1.3 | SPECIFICATIONS | 10 |
| 1.4 | TYPICAL APPLICATION DIAGRAMS | 11 |
| 1.4.1 | Basic Signal Flow with the SL Module | 11 |
| 1.4.2 | Example of a Complete Redundant System | 12 |
| 1.4.3 | GPI Connection to an External Alarm System | 13 |
| 1.5 | SOFTWARE UPDATE | 14 |
| 1.6 | ELECTRONIC PART EXCHANGE | 15 |
| 2 | OPERATING DESCRIPTION | 16 |
| 2.1 | FUNCTIONAL OVERVIEW | 16 |
| 2.1.1 | Basic Functions | 16 |
| 2.1.2 | Overview of Error Indications and Alarms in General | 17 |
| 2.1.3 | Overview of Error Indications at the Status Monitor | 18 |
| 2.1.4 | Error Reset | 19 |
| 2.2 | LTC MONITORING | 20 |
| 2.2.1 | Overview of Measurements and Error Detections | 20 |
| 2.2.2 | The Individual Errors | 22 |
| 2.2.3 | Consequences of Errors | 24 |
| 2.3 | LTC CHANGEOVER | 26 |
| 2.4 | REAL-TIME REFERENCE MONITORING | 27 |
| 2.4.1 | Overview | 27 |
| 2.4.2 | The Individual Errors and Consequences of Errors | 28 |
| 2.5 | SELF TEST | 30 |
| 2.6 | ALARMS | 32 |
| 2.6.1 | Overview and Suggestions for Installation | 32 |
| 2.6.2 | Alarms by GPI Outputs | 33 |
| 2.6.3 | Alarms by SNMP Traps | 34 |
| 2.6.4 | Entries in the Log File of an Ethernet Module | 35 |
| 3 | STATUS MONITOR | 36 |
| 3.1 | STATUS MONITOR BY THE ETHERNET MODULE | 36 |
| 3.2 | STATUS MONITOR BY A PC PROGRAM | 36 |
| 3.3 | SYSTEM STATUS | 37 |
| 3.4 | SIGNAL INPUT STATUS | 39 |
| 3.5 | STATUS OF THE REAL-TIME REFERENCE | 41 |



| | | |
|----------|--|-----------|
| 3.6 | STATUS OF FAN AND POWER SUPPLIES | 42 |
| 4 | THE RUBIDIUM CONFIGURATION TOOLS | 43 |
| 4.1 | THE RUBIDIUM CONFIGURATION PC PROGRAM | 43 |
| 4.2 | THE RUBIDIUM SERIES HTTP SERVER | 43 |
| 4.3 | “FUNCTIONS“ | 44 |
| 4.4 | “KEYS“: KEYS AND LAMPS, LEDS AND GPIS | 45 |
| 4.5 | “SWITCHER“: SET-UP THE MONITORING AND CHANGEOVER | 48 |
| 4.6 | “LINK“: COMMUNICATION BETWEEN MODULES | 51 |
| 4.7 | “SYSTEM“: IDENTIFICATION, RESET, SNMP, FAN CONTROL | 52 |



A1 Revision History

| No. | Date | Subject |
|-----|-------------------|---|
| 0.n | | Preliminary documents, changes without notice. |
| 1.0 | June 2, 2005 | First released document. |
| 1.1 | August 23, 2005 | Revised. |
| 1.2 | November 29, 2006 | Revised. |
| 2.0 | December 12, 2006 | Revised. Format of reference selectable. |
| 2.1 | September 2009 | Chapter ' <i>Electronic Part Exchange</i> ' revised. |
| 3.0 | February 11, 2011 | Completely revised. |
| 4.0 | May 7, 2013 | <ul style="list-style-type: none"> ▪ Revised. ▪ Entries can be made to the log file of an Ethernet module. ▪ The TC link telegram 'Reference' can be sent. |
| 4.1 | September 3, 2019 | Changed address of Plura Europe GmbH. |
| 4.2 | November 4, 2019 | Fixed NMEA baud rate to 4800. |
| 4.3 | December 2, 2020 | Re-formatted in new design. |
| 4.4 | January 12, 2024 | Updated download links and update instructions. |

Due to constant product development the features of this module are subject to change. The current functional description always refers to the current software and the current configuration tool.

You can download the latest version of the standard software from

<https://plurainc.com/products/sl/>.

Please be sure to use the latest configuration program after having done an update. You can download the latest version from the address above.



A2 Copyright

Copyright © Plura Europe GmbH 2002-2024. All rights reserved. No part of this publication may be reproduced, translated into another language, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise without the prior written consent of Plura Europe GmbH.

Printed in Germany.

Technical changes are reserved.

All brand and product names mentioned herein are used for identification purposes only and are trademarks or registered trademarks of their respective holders.

Information in this publication replaces all previously published information. Plura Europe GmbH assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein.

For further information please contact your local dealer or:

Plura Europe GmbH
Binger Weg 12
D- 55437 Ockenheim
Phone: +49 6725 918 006-70
Fax: +49 6725 918 006-77
E-Mail: info@plurainc.com
Internet: <http://www.plurainc.com>

A3 General Remarks

This manual is a supplement to the '*Installation & Systems Manual RUBIDIUM SERIES*'. Please read the below listed chapters of the '*Installation & Systems Manual RUBIDIUM SERIES*', as these chapters are necessary for the safe and proper use of RUB modules:

- *A3 Warranty,*
- *A4 Unpacking/Shipping/Repackaging Information,*
- *A5 Safety Instructions,*
- *A6 Certifications & Compliances,*
- *Plug-In a Module,*
- *Remove a Module.*



1 Module “SL”

1.1 General Description

This module can frame accurate and in real-time compare and contrast two incoming LTC signals for indescribable differences. In the event of a failure, **SL** automatically switches to the other faultless source. The **SL** is a must for all time code systems where failure proof LTC is a requirement. This includes real-time and MTD Time Timer Timecode applications. It monitors LTC and real-time reference signals, time differences between the LTC signals and time differences of LTC against the real-time reference. Status information about all sources is available at a status monitor.

A **PC** or one of the RUB Ethernet modules (**RUB IE** or **RUB PM**) is required to configure this module.

A front panel label **SL** visibly identifies RUB1 version modules. RUB3 version modules have this label at the rear plate. A serial number is located on the bottom side of the lower circuit board of each module.

The standard hardware of this module has all of the following key features:


- “Hot Swapping”, i.e. it is possible to insert or remove a module without interrupting the operation of other modules in this frame.
- Failure relay, connected to the FAIL_A and FAIL_B pins of the **RLC** connector at the rear of the frame.
- RS232 and TC_link (RLC connector) interfaces to have access to the internal bus of the chassis.
- Four programmable function keys, lamps and LEDs on the front panel (RUB1 version only).
- Flash memory containing the firmware, so configuration and updates are possible via a PC connection. You can download the latest version of the program from:

<https://plurainc.com/products/sl/>.

- Two LTC inputs.
- Inputs for signals of a real-time reference (PPS, time & date data string), and 1 to 2 distribution of these signals.
- Changeover regarding the two LTC signals and the SERIAL and TELEGRAM input signals, utilizing latching relays.
- Alarm outputs indicating failures and warnings: Lamps and LEDs (RUB1 version only), GPIs, SNMP traps, and entries in the log file of an Ethernet module.



1.2 Rear Panel and Connections

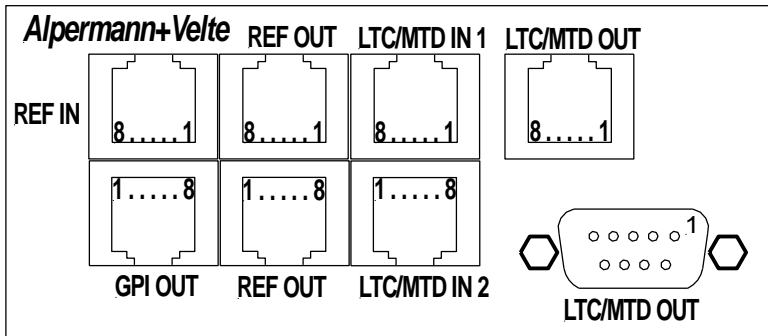

Pin assignments


| LTC/MTD IN (1/2) RJ45 jack | LTC/MTD OUT RJ45 jack | LTC/MTD OUT DSUB9F female |
|-------------------------------|--------------------------|------------------------------|
| 1: RS485 TRA | 1: RS485 TRA | 1: RS485 TRA |
| 2: RS485 TRB | 2: RS485 TRB | 2: RS485 TRB |
| 3: LTC_IN_A | 3: LTC_OUT_A | 3: LTC_OUT_A |
| 6: LTC_IN_B | 6: LTC_OUT_B | 4: LTC_OUT_B |
| 4: GND | 4: GND | 5: GND |
| 5: DRVSEL | 5: n.c. | 6, 7: n.c. |
| 7: SERIAL IN | 7: SERIAL OUT | 8: SERIAL OUT |
| 8: TELEGRAM IN | 8: TELEGRAM OUT | 9: TELEGRAM OUT |

| REF IN RJ45 jack | REF OUT 2 x RJ45 jack |
|---------------------|--------------------------|
| 1: PPS IN | 1: PPS OUT |
| 2: RXD IN | 2: TXD OUT |
| 3, 6: n.c. | 3, 6: n.c. |
| 4: GND | 4: GND |
| 5: VCC24G_OUT | 5: VCC24G_IN |
| 7: GND IN | 7: GND OUT |
| 8: VCC5G_OUT | 8: VCC5G_IN |

| GPI OUT RJ45 jack |
|----------------------|
| 1: GND |
| 2: GPI_1 |
| 5: GPI_3 |
| 6: GPI_2 |
| 8: GPI_4 |
| 3: XCP |
| 4: XCC |
| 7: XCS |



Signal descriptions

| | |
|---|--|
| GND | Signal ground. |
| RS485 TRA / RS485 TRB | Balanced in- or outputs of a RS485(MTD) serial interface, hard wired between input and output connectors. |
| LTC_IN_A, LTC_IN_B | Balanced LTC (Linear Time Code) inputs. |
| LTC_OUT_A, LTC_OUT_B | Balanced LTC (Linear Time Code) output, switched via relay 1 to one LTC input. |
| DRVSEL | Output signal. In a redundant system, SL gives a feedback to the connected GT/GL modules to define one module as "primary" and the other as "back-up". |
| SERIAL IN SERIAL OUT | Time & date serial; signal of a connected GT/GL module. Output signal switched via relay 2 to one SERIAL IN input. |
| TELEGRAM IN TELEGRAM OUT | Impulse telegram; signal of a connected GT/GL module. Output signal switched via relay 2 to one TELEGRAM IN input. |
| PPS IN PPS OUT | Pulse per second, input. Time mark of a real-time reference. Pulse per second, output. Hard wired to PPS IN. |
| RXD IN TXD OUT | Serial data string, input. Signal of a real-time reference. Serial data string, output. Hard wired to RXD IN. |
| VCC24G_OUT | 4 VDC voltage output, 200 mA reversible fused. This output voltage will be delivered from the power supply module in use (please notice the power supply specifications), or from the VCC24G_IN pin. |
|  | Using VCC24G_OUT output please make sure not to exceed the total power rating of the power supply module. |
| VCC24G_IN | Hard wired with VCC24G_OUT signal. |
| GND IN/GND OUT | These signals are just hard wired. |
| VCC5G_IN/VCC5G_OUT | These signals are just hard wired. |
| GPI_1 ... GPI_4 | Output signals, indicating failures, warnings, or status. |
| XCP, XCC, XCS | Spare contacts at relay 2 for optional usage. Switching occurs in parallel to the LTC relay 1. XCC: Common XCP: Primary XCS: Secondary/Back-up |



1.3 Specifications

LTC input

| | |
|---------------------------------|--|
| Format | According to ANSI/SMPTE 12M-1-2008, balanced signals |
| Input impedance | 18 kΩ |
| Signal level | 100 mV _{p-p} to 5 V _{p-p} , auto-ranging |
| Frequency | 19 – 33 frames/s |
| Accuracy of timing measurements | TC/TC difference, TC/Ref difference: ± 20 μs |

PPS IN, RXD IN

| | |
|---------------------|---|
| Input specification | Input "Low": -15.0 to +1.0V. Input "High": +3.0 to +15.0V. Frequency: 0 – 1 MHz. |
|---------------------|---|

GPI_1, GPI_2, GPI_3, GPI_4

| | |
|----------------------|--|
| Output specification | Open Collector output of an NPN transistor. Max. power dissipation: 200 mW per output. "High" state: External pull-up needed to a positive power source of ≤ 24 VDC. Example: 2.2 kΩ @ 5 VDC or 4.7 kΩ @ 12 VDC or 12 kΩ @ 24 VDC. "Low" state: Output switched to GND. Max. collector current: 100 mA DC, fused (auto-recovery). Collector-emitter saturation voltage: @100 mA: Typ. 200 mV (≤ 600 mV). @10 mA: Typ. 90 mV (≤ 250 mV). Frequency: 0 – 150 kHz. |
|----------------------|--|

VCC24G_OUT

| | |
|---|---|
| Output of the DC power supply of this module, normally = 23.8 VDC | Reversible fused. A continuous current of up to 120 mA may be applied over the whole specified operating temperature range. At an ambient temperature of e.g. 22 °C the output switches to a high-resistance state after a few seconds if a current of 400 mA is applied. |
|---|---|

XCP, XCC, XCS

| | | |
|--|------------------------------|---------------------------------|
| Spare contacts of the latching relay 2 | Max. switching power: 24 W | Max. switching current: 1 A |
| | Max. switching voltage: 48 V | Max. transportable current: 1 A |


Others

| | |
|--|---|
| Operating voltage | 12 – 30 VDC |
| Power consumption | 1.2 W at maximum |
| Weight | ≈ 0.3 kg |
| Dimensions | Standard circuit board (W x D): 100 x 160 mm/3.94 x 6.30 inch Rear panel: RUB1: 103 x 44 mm / 4.06 x 1.73 inch RUB3: 8HP, 3RU |
| Environmental characteristics, operating | Temperature: +5 °C to +40 °C Relative humidity: 30 % to 85 %, non-condensing |
| Environmental characteristics, non-operating | Temperature: -10 °C to +60 °C Relative humidity: 5 % to 95 %, non-condensing |



1.4 Typical Application Diagrams


1.4.1 Basic Signal Flow with the SL Module

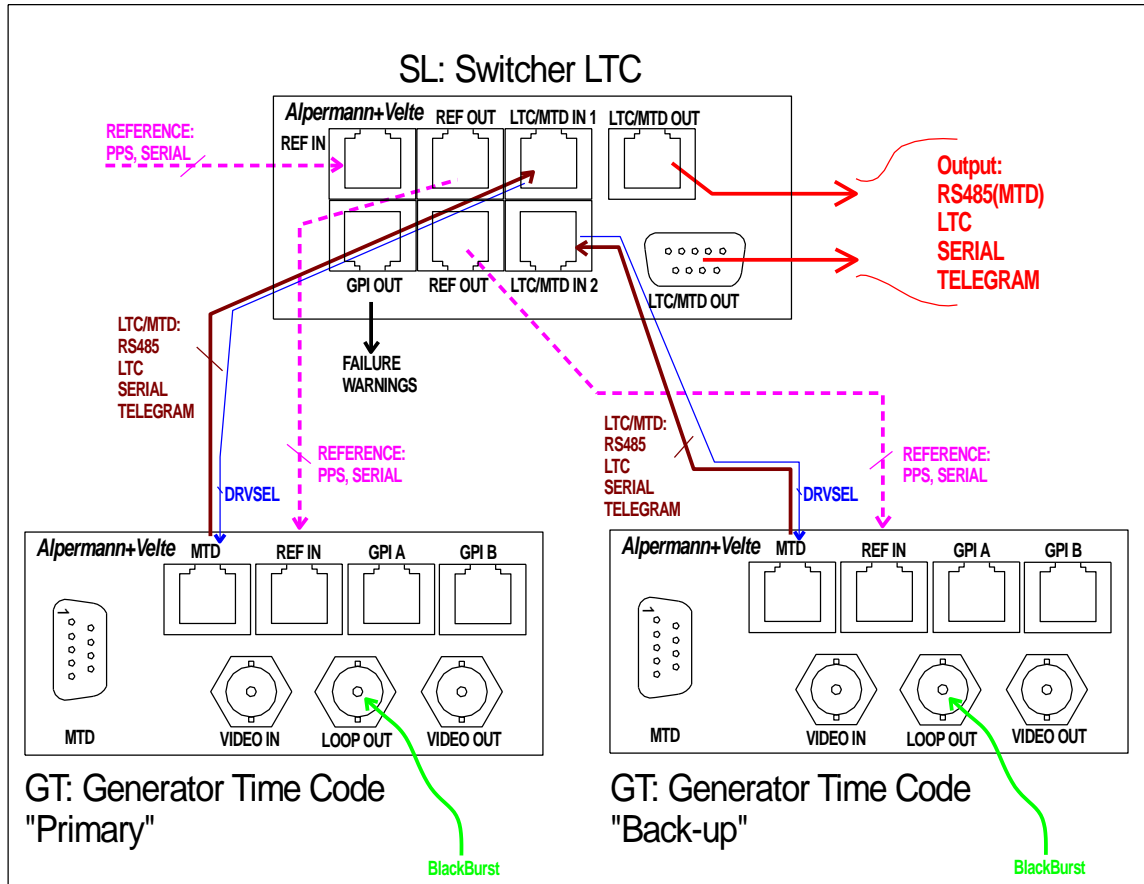


- LTC: Monitoring and changeover.
- Signals of a real-time reference (PPS, serial data): Monitoring and 1 to 2 distribution.
- SERIAL and TELEGRAM will be switched simultaneously with the LTC signals.
- RS485 signals are hard wired between input and output connectors.
- The DRVSEL output signal gives a feedback to the connected GT/GL modules to define one module as "primary" and the other as "back-up". Only a "primary" module gives returns at the RS485(MTD) interface and sends data on the internal TC_link interface, e.g. the reference time for an NTP time server.



1.4.2 Example of a Complete Redundant System

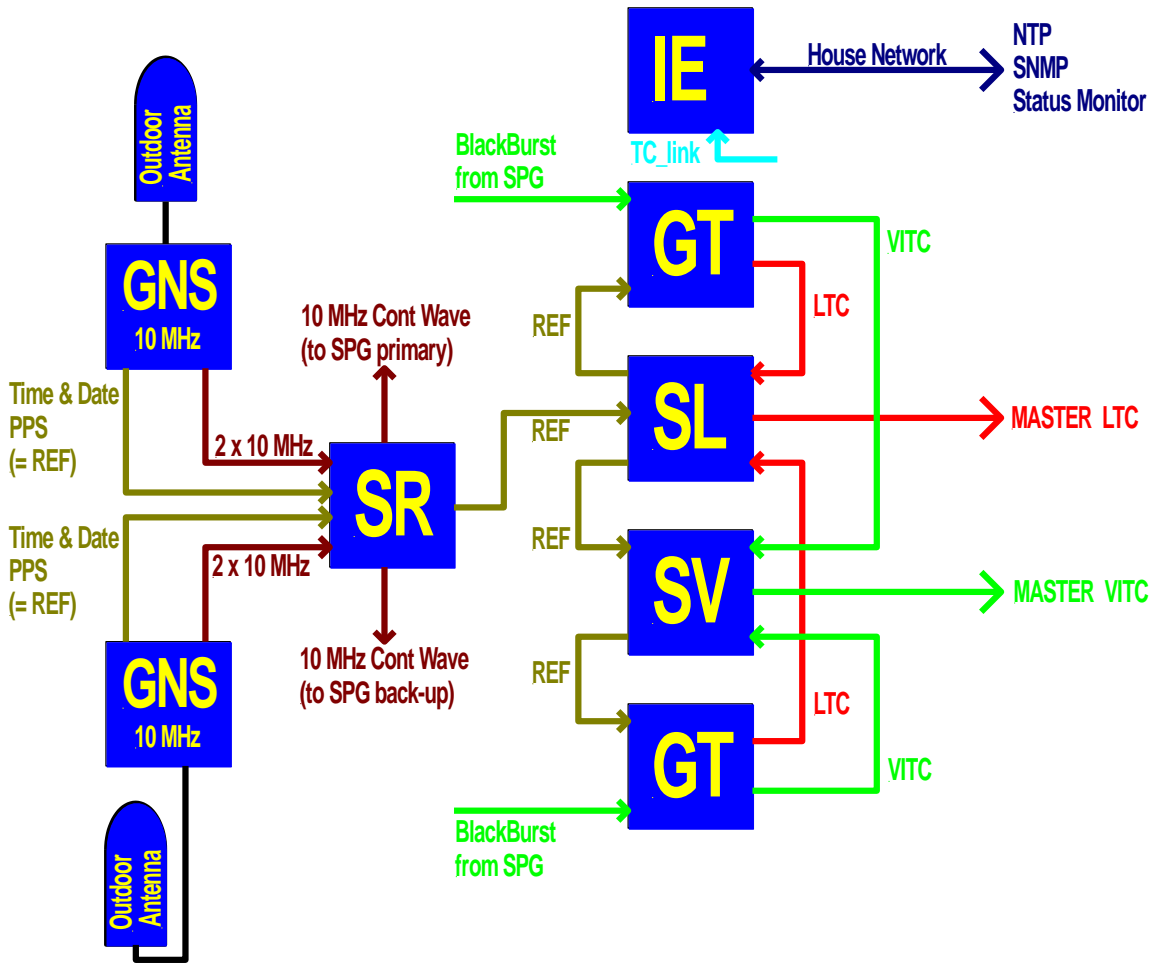

1.4.3 GPI Connection to an External Alarm System

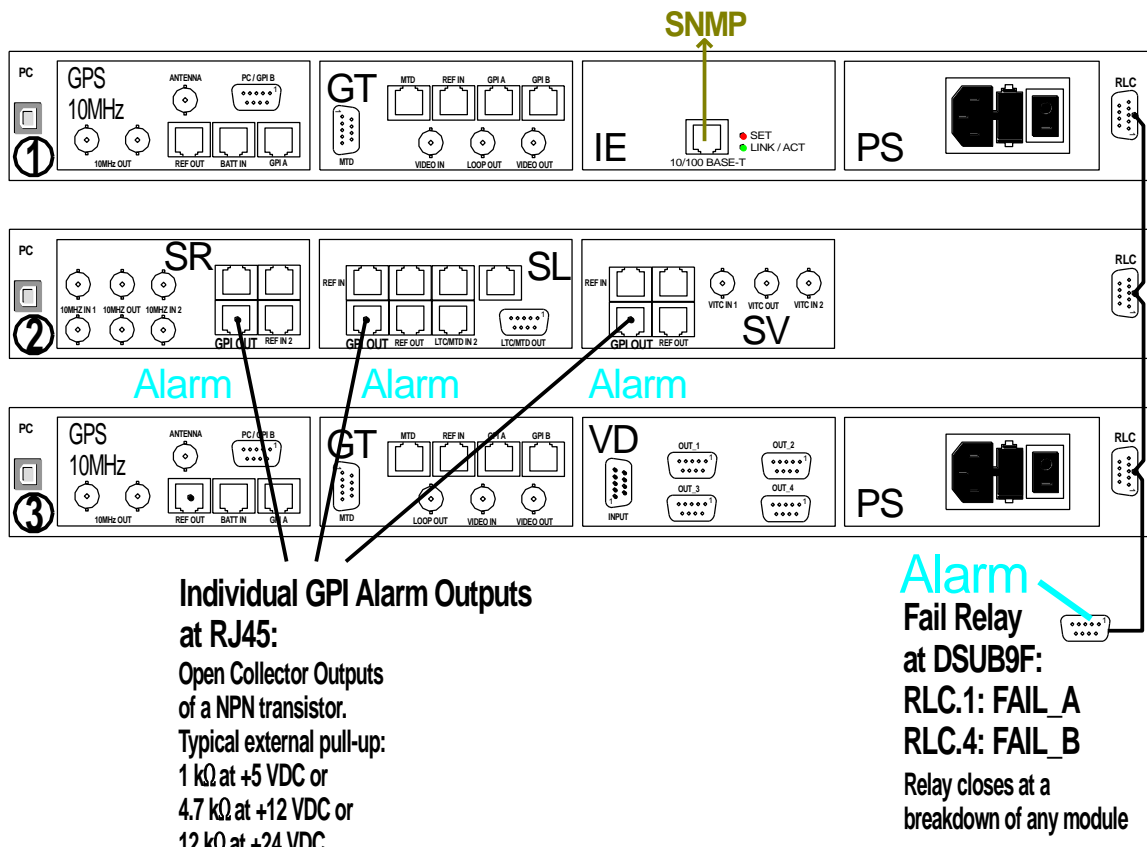

GPI alarms, default configuration:

| GPI | Switcher "SR" | Switcher "SL" | Switcher "SV" |
|------------------|----------------------------|---------------------|----------------------------|
| Signal 1 Failure | PPS/serial input 1 failure | LTC input 1 failure | Video/VITC input 1 failure |
| Signal 1 Warning | PPS/serial input 1 warning | LTC input 1 warning | Video/VITC input 1 warning |
| Signal 2 Failure | PPS/serial input 2 failure | LTC input 2 failure | Video/VITC input 2 failure |
| Signal 2 Warning | PPS/serial input 2 warning | LTC input 2 warning | Video/VITC input 2 warning |

Please also notice the document 'RUB Switcher Alarm GPO'. You may open this document at <https://plurainc.com/products/sl/>



1.5 Software Update

Software updates require a (Windows operating system) computer and the “RUBIDIUM CONFIGURATION” program.

Important: Please make sure to always use the latest version of the program. You can download it from:

<https://plurainc.com/products/sl/>.

Please check the **PC** connector at your RUBIDIUM housing: There is an USB or RS232 (with a DSUB9 connector) interface installed. You now need the same interface at your computer.

The new firmware should already be stored as a **.tcf** file at your computer.

Please now execute the following steps:

1. Connect your computer to the **PC** connector of that RUBIDIUM frame where the module has been plugged.

In case of an RS232 interface: Use a straight (1:1) connection between the **PC** connector at the RUBIDIUM frame and the RS232 of the computer.

In case of an USB interface: Use a USB A-B cable between your computer and the RUBIDIUM frame.

Switch on the power of all units.

2. Execute “Rubidium Config.exe” on your computer. Select the “Port” according to the interface (USB, RS232) you are using.
3. Select the module (unit 1, 2, 3 ...).
4. Select “Flash Update” in the *File* menu.
5. Open the **.tcf**-file. Standard name: “Rubidium SL version.tcf”.
“version” stands for a revision no., e.g. 2.13.8.

Click the OK button, update starts. Click the OK button at the end.

6. Update is finished now. We recommend checking module’s configuration utilizing the “RUBIDIUM CONFIGURATION” program.

During the flash update the operation of the module stops!


The changeover relay remains in its last position, so the signal flow of the connected signals will not be affected.



1.6 Electronic Part Exchange

The hardware of the module comprises three printed circuit boards: The main electronic board at the bottom layer, the keyboard which is fixed to the main electronic board by soldered pins, and the rear panel board which is attached to the main electronic board by screws.

The rear panel board with its connectors and the latching relay consists of “mechanical” parts, so there is a good chance that a damage of the module concerns the electronic part only. The following exchange procedure removes the main electronic board and the keyboard without interrupting the signal output. No cable should be disconnected.

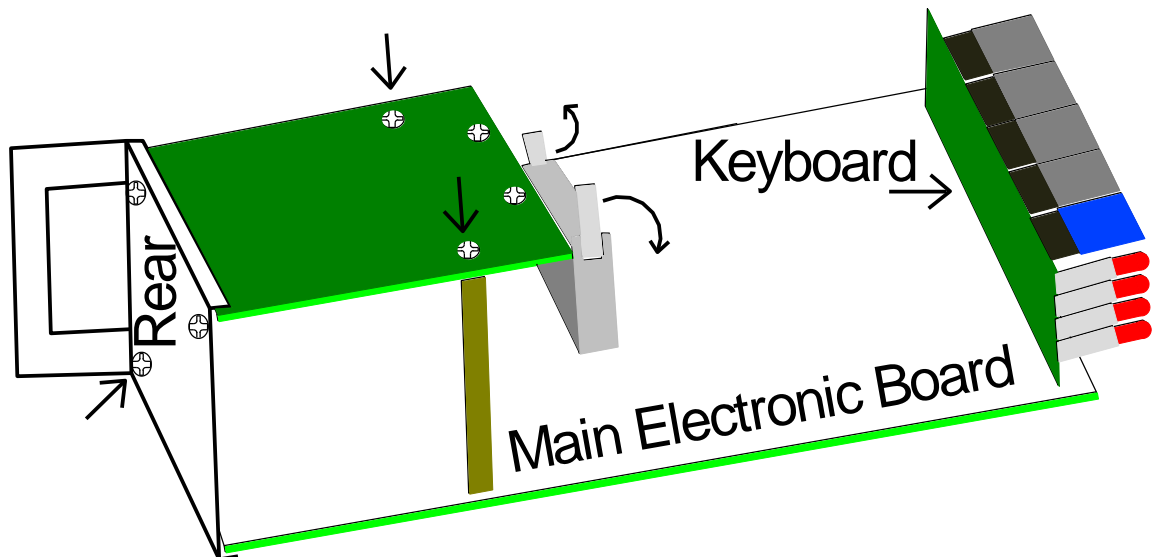

1. Arrangement:

Contact your local dealer or Plura to order the main electronic board and the keyboard for a replacement. It is essential that you have as much information ready as possible: Serial number of the module, software version number, set-up and configuration. This will help to ensure that you are getting a direct replacement, even regarding the set-up values – which are stored in a non-volatile memory located at the main electronic board.
2. Preparation:

Have a screwdriver for recessed-head screws ready.
3. Removal:

Do not switch off the power. Do not disconnect cables. Follow the procedure described in the chapter 'Remove a Module' of the 'Installation & Systems Manual RUBIDIUM SERIES' to pull the module out of the slot. Observe precautions for handling electrostatic-sensitive devices.
4. Dismantle:

Unscrew only the three screws as shown in the figure above: One screw at the rear plate and two screws at the rear panel board. Release the levers of the IDC connector and pull out the 20-way ribbon cable. Now the main electronic board and the keyboard can completely be removed.
5. Reassemble:

In principle follow the procedure in the reverse order.




2 Operating Description

2.1 Functional Overview

2.1.1 Basic Functions

- Decoding of two LTC signals. Checking the validity of the time addresses.
- Monitoring and failure analysis of the LTC inputs; changeover in an event of a failure.
- Measurement and monitoring the time difference and drift between the LTC signals.
- Monitoring the signals of a real-time reference.
- Measurement and monitoring the time difference and drift of the LTC signals against the real-time reference.

RS485(MTD) signals are hard wired between input and output (not shown in the figure below).

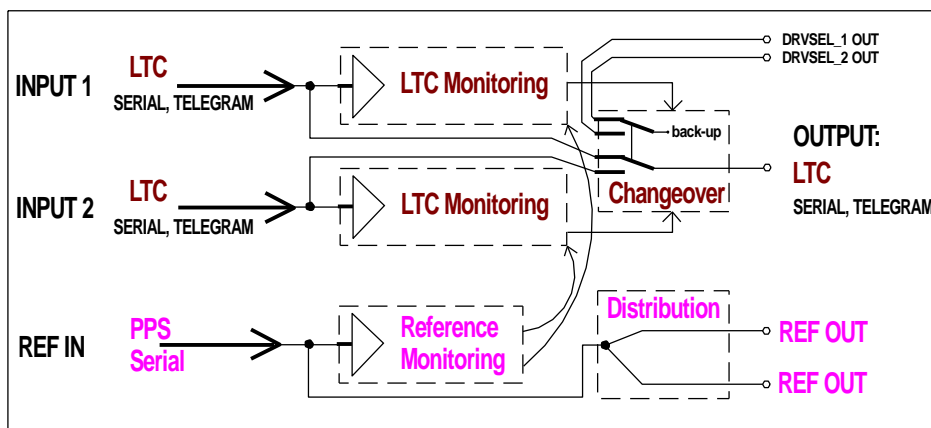

The Status Monitor indicates:

LTC status information:

- LTC time addresses, binary groups, flag bits, and frame rate information.
- Time difference between the LTC signals.
- Time difference of the LTC signals against the real-time reference.
- Error counters and error indications in case of failures and warnings.

Status information regarding the real-time reference:

- Time, date and status.
- Error counters and error indications.

Additional system status information:

- Monitor for manual and automatic changeover events.
- Error counters/error indications: Check of set-up parameters, relay monitoring.
- And more ...

PC programs are available for free: Configuration of the module = **RubidiumConfig.exe**, status monitor = **RubStatSE.exe**.

The RUBIDIUM SERIES HTTP server, located in the Ethernet module (**RUB IE** or **RUB PM**) enables the configuration of the module and offers a status monitor as well.



2.1.2 Overview of Error Indications and Alarms in General

This module detects errors on LTC signals, on signals of the real-time reference, or on the module itself after a self-test.

Basically, each individual error will be represented by a status, an error counter, and an indication of a failure. The indication of a failure can be disabled. If not disabled, special alarms can be raised in case of an error. This gives the user the possibility to select individual errors for an alarm indication.

Furthermore, two overall counters are giving a quick overview:


- The “**overall errors**” counter shows the sum of all individual errors. A count value of > 0 indicates that at least one error has been detected.
- The “**overall failures**” counter shows the sum of all individual failures, i.e. all those errors with the failure indication not disabled. A count value of > 0 indicates that at least one failure has been detected.

You can see all the individual errors and both overall counters at the [status monitor](#). Please open the status monitor to investigate the source of an error.

- Chapter ‘*Overview of Error Indications at the Status Monitor*’.
- Chapter ‘*Status Monitor*’.

RUB1 modules, i.e. modules plugged to a 1 RU chassis, indicate errors by the ERROR LED and failures by the FAIL lamp (in the default configuration):

- The LED in the “Switcher Error” function lights up as long as the “**overall errors**” counter has a count value > 0 .
- The lamp/key in the “Fail” function lights up as long as the “**overall failures**” counter has a count value > 0 .

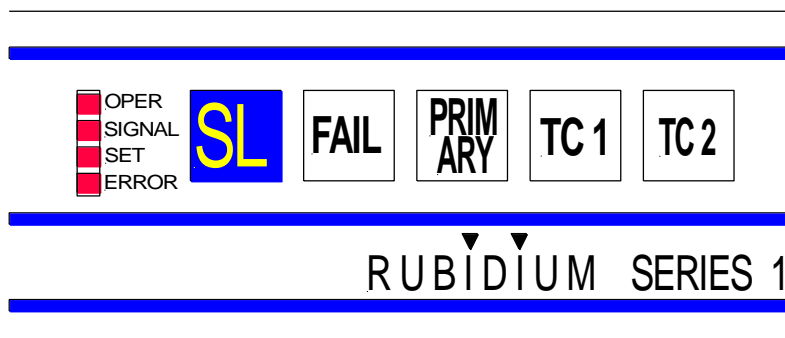

GPI outputs can indicate failures and warnings:

- Chapter ‘*Alarms by GPI Outputs*’.

SNMP Traps can indicate failures and warnings.

- Chapter ‘*Alarms by SNMP Traps*’.

Entries in the log file of an Ethernet module can indicate failures and warnings.

- Chapter ‘*Entries in the Log File of an Ethernet Module*’.



2.1.3 Overview of Error Indications at the Status Monitor

The **System** page of the status monitor shows the “overall failures” counter, the “overall errors” counter, and the individual errors of the system:

| System Status | | | | |
|---------------------------|---------------------|---------------|---------------------|-----------------|
| output | primary | | | |
| signals received | yes | | | |
| overall failures | 0 | | | |
| overall errors | 0 | | | |
| tc/tc difference | - 00 : 00 : 00 : 00 | 0,002 ms | | |
| max difference | 00 : 00 : 00 : 00 | 0,014 ms | valid | |
| changeover events: | | | | |
| automatic | 0 | time tc1 | 13 : 19 : 08 | |
| manual | 1 | time tc2 | 13 : 19 : 08 | |
| last event | manual | reference | 06.01.2011 12:19:08 | |
| | status | counts | fail | disabled |
| power on | 0 | | 0 | 0 |
| relay 1 | 0 | 0 | 0 | 0 |
| relay 2 | 0 | 0 | 0 | 0 |
| tc/tc difference | 0 | 0 | 0 | 0 |

The **Input 1** page shows the individual errors with respect to the signals at LTC/MTD IN 1.
The **Input 2** page shows the individual errors with respect to the signals at LTC/MTD IN 2.

The **Reference** page shows the individual errors with respect to the real-time reference.

Please refer to the following chapters for a detailed description of the individual errors:

- Chapter ‘LTC Monitoring’.
- Chapter ‘Real-Time Reference Monitoring’.
- Chapter ‘Self-Test’.

Basically, the following happens in case of an error:

- status** Indicates the error status at this very moment: Error yes (1) or no (0).
The status resets to 0 if this individual error has disappeared.
- counts** Counter counts up with every new error. Maximum count = 65,535. A count value > 0 indicates that there has been an error even if the status currently indicates no error.
Simultaneously, the “overall errors” counter counts up.
- fail** Indicates the individual failure status at this very moment: Failure yes (1) or no (0). The failure indication can be disabled. The failure indication corresponds to the error status if ‘fail’ has been enabled. A failure can raise special alarms.
Simultaneously, the “overall failures” counter counts up.
- disabled** The failure indication of this individual error can be disabled. If disabled, no failure will be indicated, and no special alarm will be given in case of an error.



2.1.4 Error Reset

The following error indications are self resettable (reset, if no errors are present):

- The individual **status bits at the status monitor**.
- The GPI outputs of functions **Signal 1 Failure, Signal 2 Failure, Signal 1 Warning, Signal 2 Warning**.

The following error indications remain as long as the overall counters have count values > 0:

| „overall errors“ > 0 | „overall failures“ > 0 |
|---|---|
| <ul style="list-style-type: none"> • LED (ERROR) in the Switcher Error function. • GPI output in the System Error function. • SNMP trap System Error. | <ul style="list-style-type: none"> • Lamp (FAIL) in the Fail function. • GPI output in the System Failure function. • SNMP trap System Failure. |

A reset of these counters and – at the same time – a reset of all individual error counters can be done by:

Keystroke

RUB1 modules, i.e. modules plugged to a 1 RU chassis, offer four programmable keys. The following functions are provided for a reset:

| Function | Description | Recommended Key |
|-----------|--|-----------------|
| Clear | Resets all error counters to zero. | F1: FAIL |
| Reset All | Complete reset of error counters and status. | F1: FAIL |

It is recommended to assign the „Reset All“ function to the FAIL key.

Configuration

Utilizing one of the configuration tools, a complete reset of error counters and status can be done clicking the “Error Reset“ button at the **Switcher** page.



2.2 LTC Monitoring

2.2.1 Overview of Measurements and Error Detections

This module monitors two LTC signals. After the power has turned on, the monitoring starts if once a valid signal has been received.

signals received yes

signals received = yes, if once a complete LTC word has been received.

The time difference between the LTC signals will be measured. The result will be shown at the **System** page of the status monitor:

| | | | |
|-------------------------|---------------------|----------|-------|
| tc/tc difference | - 00 : 00 : 00 : 00 | 0,002 ms | |
| max difference | 00 : 00 : 00 : 00 | 0,014 ms | valid |

tc/tc difference Time difference, HH:MM:SS and milliseconds ($\pm 20 \mu\text{s}$). This difference is calculated taking the time data and the phase of the synchronization word into account.

A "+" sign means: *LTC IN 1* time is equal or ahead of *LTC IN 2* time. A "valid"/"invalid" flag indicates whether the current difference is valid or not. If one LTC input fails, the time difference is invalid.

A "**tc/tc difference**" error will be indicated if the time difference equals or exceeds the limit "Limit TC/TC". This limit is programmable. Please refer to chapter 'The Individual Errors' for more information.

max difference Maximum value of "tc/tc difference", HH:MM:SS, no sign.

Further monitoring is done separately for signals at *LTC/MTD IN 1* and *LTC/MTD IN 2*. The status monitor shows the results at **Input 1** page or **Input 2** page resp.:

The decoded data of the LTC signal and the selected frame rate:

| | | | |
|-------------|--------------|-------------------|----|
| time | 10 : 56 : 39 | frame rate | 25 |
| user | 03 10 12 10 | bits | 10 |

time HH:MM:SS.

user Hexadecimal representation of the user bits (binary group data BG8 – BG1).

frame rate The frame rate of the time code, as selected by configuration.

bits Hexadecimal representation of the six flag bits of the time code.



The time difference and drift of the LTC signal against the real-time reference:

| | | | |
|--------------------------|---------------------|----------|-------|
| tc/ref difference | - 00 : 00 : 00 : 00 | 4,201 ms | |
| max difference | 00 : 00 : 00 : 00 | 4,233 ms | valid |
| drift | 0,5 ms | ready | |

tc/ref difference Time difference, HH:MM:SS and milliseconds ($\pm 20 \mu s$). This difference is calculated taking the time data of LTC and real-time reference as well as the phase of the synchronization word against the PPS into account.

A “+” sign means: LTC time is equal or ahead of the real-time reference. A “valid”/“invalid” flag indicates whether the current difference is valid or not. If LTC or real-time reference input fails, the time difference is invalid.

There are two programmable limits. An error will be indicated if the time difference equals or exceeds one of these limits. Please refer to chapter ‘The Individual Errors’ for more information.

max difference Maximum value of “tc/ref difference”, HH:MM:SS and milliseconds, no sign.

drift The drift (milliseconds) of the LTC signal against the real-time reference = the variation of the difference with time. There are programmable limits, too. An error will be indicated if the drift equals or exceeds one of these limits. Please refer to chapter ‘The Individual Errors’ for more information.

If you are working in a television system and the video sync generator (SPG) should be locked to a real-time reference, please note:

- In the 625/50 television system (PAL), exactly one second of real-time elapses during the duration of 25 frames; so, no drift should occur. With frame rate = “25”, the drift will be measured every second.
- In the 525/60 television system (NTSC), 30/1.001 frames will be generated each second – this is not an integer number each second. Naturally, the video locked time code will have a drift against the real-time. With frame rate = “30 Drop”, the drift will be measured every 10 minutes. The drop frame compensation allows comparing signal phase every 10 minutes.

Errors and failures (see chapter “The Individual Errors” for details):

| | | | | |
|------------------------------------|---|---|---|---|
| changeover & monitoring | | | | |
| sequence | 0 | 0 | 0 | 0 |
| frame rate | 0 | 0 | 0 | 0 |
| timeout | 0 | 0 | 0 | 0 |
| tc/ref fail | 0 | 0 | 0 | 0 |
| monitoring | | | | |
| tc/ref error | 0 | 0 | 0 | 0 |
| lock range | 0 | 0 | 0 | 0 |
| lock drift | 0 | 0 | 0 | 0 |
| current sequence | 0 | 0 | | |



2.2.2 The Individual Errors

The following error may occur comparing both signals at *LTC/MTD IN 1* and *LTC/MTD IN 2*. This error will be indicated at the **System** page of the status monitor:

Time difference between the LTC signals: **TC/TC Difference**

The module decodes the time information and measures the phase of the synchronization word of the LTC signals. From that, the precise time difference can be calculated and displayed: "**tc/tc difference**" and "**max difference**". A "**tc/tc difference**" error will be indicated if the time difference equals or exceeds the limit "Limit TC/TC". This limit is programmable in the range from 1 s to 9 s.

This is the only error which is assigned together to both LTC signals. A "System Error" or "System Failure" alarm can be raised, but no warning or failure indicating a problem of a specific LTC input. Therefore, this error will not be considered for a changeover.

Further monitoring is done separately for signals at *LTC/MTD IN 1* and *LTC/MTD IN 2*. The status monitor indicates the errors at **Input 1** page or **Input 2** page resp.:

Signal loss: **Timeout**

No valid LTC detected since 140 ms leads to a "**timeout**" error.

This error will be classified as a major error, so this error will be considered for a changeover.

Wrong frame rate: **Frame Rate**

Both LTC signals should have the same frame rate. The frame rate of the system has to be set by configuration. An error in the frame number counting periodically detected at a second's rollover leads to a "**frame rate**" error.

This error will be classified as a major error, so this error will be considered for a changeover.

Signal disturbances: **Sequence**

The LTC input produces multiple dropouts or time discontinuities over a longer time interval. This leads to a "**sequence**" error.

This error will be classified as a major error, so this error will be considered for a changeover.

Continuity of the time: **Current Sequence**

A time discontinuity has been detected while checking the LTC time information (HH:MM:SS). This leads to a "**current sequence**" error - even at a valid time discontinuity in case of a leap second or a DST switching of a local time zone.

This error will be classified as a minor error, so this error will not be considered for a changeover. Different from all other errors, there is no 'fail' and 'disabled' bit provided, so this error cannot be a failure.



Time difference against the real-time reference: **TC/Ref Error** and **TC/Ref Fail**

If the PPS (pulse per second) and RXD (serial data string) signals of a real-time reference are connected, the module measures and displays the precise time difference of the LTC signals against the real-time reference: “**tc/ref difference**” and “**max difference**”.

It is common practice that the time zone of the real-time reference is different from the time zone of the LTC time code, e.g. real-time reference = UTC and LTC time code = local time zone. This often results in a time difference of some hours and should not be treated as an error. Accordingly, the “Ref. Compare” parameter (please refer to chapter “*Switcher*”: *Set-up the Monitoring and Changeover*’) should receive an appropriate set-up:

| | |
|----------|--|
| HH:MM:SS | = Time difference calculated without restrictions. |
| MM:SS | = Comparing only minutes and seconds. |
| M:SS | = Comparing only unit of minutes and seconds. |
| SS | = Comparing only seconds. |

The rising edge of the PPS will be the time reference mark of the real-time reference; the beginning of the LTC data word will be the time reference mark of the LTC. A nominal difference of 0 ms occurs, if the LTC is locked to the PPS, or if the LTC is locked to a 625/50 (PAL) video which is perfectly locked to a PPS (i.e. there is no phase delay between PPS and the beginning of the first field).

A “**tc/ref error**” error will be indicated if the time difference equals or exceeds the limit “Limit TC/Ref Error”. This limit is programmable in the range from 1 s to 9 s. This error will be classified as a minor error; it is intended to give a warning.

A “**tc/ref fail**” error will be indicated if the time difference equals or exceeds the limit “Limit TC/Ref Fail”. This limit is programmable in the range from 10 s to 59 s. This error will be classified as a major error, so this error will be considered for a changeover.

Drift against the real-time reference: **Lock Range** and **Lock Drift**

The module monitors the drift of the time code against the PPS of the real-time reference. This enables to verify a phase lock of the time code generator to a PPS sync signal. This monitoring starts 30 minutes after the power has turned on to ensure that all units have synchronized. If the time difference of the time code signal against the real-time reference equals or exceeds the limit “Limit Lock”, the drift monitor stops and a “**lock range**” error will be indicated. This limit is programmable in the range from 1 to 20 frames.

While the time difference stays within the limit “Limit Lock”, the drift will be measured. If the drift equals or exceeds the limit “Limit Drift”, a “**lock drift**” error will be indicated. This limit is programmable in the range from 10 ms to 255 ms. The drift monitor stops for a short time, then the drift will be reset to zero and a new measurement starts. An error will be counted periodically as long as the drift has not been eliminated.

These errors will be classified as minor errors, so these errors will not be considered for a changeover.



2.2.3 Consequences of Errors

The “**tc/tc difference**” error will be indicated at the **System** page of the status monitor:

| | status | counts | fail | disabled |
|------------------|--------|--------|------|----------|
| power on | 0 | | 0 | 0 |
| relay 1 | 0 | 0 | 0 | 0 |
| relay 2 | 0 | 0 | 0 | 0 |
| tc/tc difference | 0 | 0 | 0 | 0 |

All other LTC errors will be indicated at the **Input 1** and **Input 2** pages:

| | status | counts | fail | disabled |
|-------------------------|--------|--------|------|----------|
| changeover & monitoring | | | | |
| sequence | 0 | 0 | 0 | 0 |
| frame rate | 0 | 0 | 0 | 0 |
| timeout | 0 | 0 | 0 | 0 |
| tc/ref fail | 0 | 0 | 0 | 0 |
| monitoring | | | | |
| tc/ref error | 0 | 0 | 0 | 0 |
| lock range | 0 | 0 | 0 | 0 |
| lock drift | 0 | 0 | 0 | 0 |
| current sequence | 0 | 0 | | |

Chapter ‘Overview of Error Indications at the Status Monitor’ describes the meaning of **status**, **counts**, **fail**, and **disabled**.

Each error has the following consequences:

- Indication of an error at the status monitor (*‘status’* = 1).
- Error counter counts one up.
- Counter *‘overall errors’* counts one up.
- LED programmed as *‘Switcher Error’* lights up (RUB1 version modules).
- GPI output programmed as *‘System Error’* becomes active.
- SNMP trap *‘System Error’* will be sent.

Each error except *‘current sequence’* has additional the following consequences if the corresponding *‘disable’* checkbox has not been checked:

- Indication of a failure at the status monitor (*‘fail’* = 1).
- Counter *‘overall failures’* counts one up.
- Lamp programmed as *‘Fail’* lights up (RUB1 version modules).
- GPI output programmed as *‘System Failure’* becomes active.
- SNMP trap *‘System Failure’* will be sent.
- The log file of an Ethernet module receives an entry.

Each *‘current sequence’* error produces an entry in the log file of an Ethernet module.

- Chapter *‘Alarms by GPI Outputs’*.
- Chapter *‘Alarms by SNMP Traps’*.
- Chapter *‘Entries in the Log File of an Ethernet Module’*.

The individual errors separately detected for signals at *LTC/MTD IN 1* and *LTC/MTD IN 2* are divided into major and minor errors. The major errors are considered for a changeover. All these individual errors can raise special alarms if the corresponding *‘disable’* checkbox has not been checked:

Major errors: *“sequence”, “frame rate”, “timeout”, “tc/ref fail”*.

- GPI output, programmed as *“Signal 1 Failure”* or *“Signal 2 Failure”* resp.
- SNMP Trap *“Signal 1 Failure”* or *“Signal 2 Failure”* resp.

Minor errors: *“tc/ref error”, “lock range”, “lock drift”*.

- GPI output, programmed as *“Signal 1 Warning”* or *“Signal 2 Warning”* resp.
- SNMP Trap *“Signal 1 Warning”* or *“Signal 2 Warning”* resp.



This table shows all the individual errors and their consequences:

| | | Individual Errors | | | | | | | | |
|----------------|--|-------------------|----------|------------|---------|-------------|--------------|------------|------------|------------------|
| | | Major Errors | | | | | Minor Errors | | | |
| | | tc/tc difference | sequence | frame rate | timeout | tc/ref fail | tc/ref error | lock range | lock drift | current sequence |
| Status Monitor | status Sets bit to 1 | yes | yes | yes | yes | yes | yes | yes | yes | yes |
| | counts Counts + 1 | yes | yes | yes | yes | yes | yes | yes | yes | yes |
| | overall errors Counts + 1 | yes | yes | yes | yes | yes | yes | yes | yes | yes |
| | fail Sets bit to 1 | yes* | yes* | yes* | yes* | yes* | yes* | yes* | yes* | no |
| | overall failures Counts + 1 | yes* | yes* | yes* | yes* | yes* | yes* | yes* | yes* | no |
| LED and Lamp | LED function Switcher Error LED (ERROR) lights up | yes | yes | yes | yes | yes | yes | yes | yes | yes |
| | Lamp function Fail Lamp (FAIL) lights up | yes* | yes* | yes* | yes* | yes* | yes* | yes* | yes* | no |
| GPI Functions | Signal 1 Failure (GPI_1) Signal 2 Failure (GPI_2) | no | yes* | yes* | yes* | yes* | no | no | no | no |
| | Signal 1 Warning (GPI_3) Signal 2 Warning (GPI_4) | no | no | no | no | no | yes* | yes* | yes* | no |
| | System Error (if "overall errors" > 0) | yes | yes | yes | yes | yes | yes | yes | yes | yes |
| | System Failure (if "overall failures" > 0) | yes* | yes* | yes* | yes* | yes* | yes* | yes* | yes* | no |
| SNMP Traps | System Error (if "overall errors" > 0) | yes | yes | yes | yes | yes | yes | yes | yes | yes |
| | System Failure (if "overall failures" > 0) | yes* | yes* | yes* | yes* | yes* | yes* | yes* | yes* | no |
| | Signal 1 Failure Signal 2 Failure | no | yes* | yes* | yes* | yes* | no | no | no | no |
| | Signal 1 Warning Signal 2 Warning | no | no | no | no | no | yes* | yes* | yes* | no |
| Log | Event SL | yes* | yes* | yes* | yes* | yes* | yes* | yes* | yes* | yes |

yes*: "yes" under the condition that the corresponding "disable" checkbox has not been checked, i.e. the status monitor shows "disabled" = 0.




2.3 LTC Changeover

SL monitors LTC signals of two sources.

With the default set-up ('Factory Settings'), the module operates in the **automatic mode**, i.e. in case of any major fault of the active source a changeover will occur to the other source.

Latching relays are used to switch the source signals, so the signal path does not change if the module loses power.

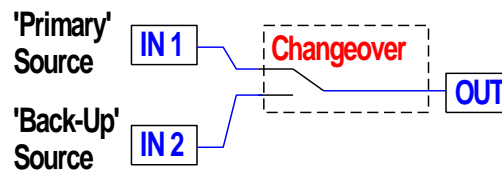

Utilizing one of the configuration tools, you can choose an **automatic** or **manual** changeover operating mode: 'Changeover = Automatic' or 'Changeover = Manual' (please refer to chapter 'Switcher': Set-Up the Monitoring and Changeover).

RUB1 modules offer keys which enable to do a manual changeover at either operating mode. Two functions are provided (please refer to chapter 'Keys': Keys and Lamps, LEDs and GPI):

- 'Changeover to Primary': Changeover to the primary source LTC/MTD IN 1. This is the recommended function, because it avoids any unintentional changeover to the back-up source.
- 'Changeover Toggle': Changeover between sources LTC/MTD IN 1 ↔ LTC/MTD IN 2.

Difference between *automatic* and *manual* operating mode:

| | Automatic | Manual |
|--|---|---|
| Automatic changeover | Enabled | Disabled |
| Function of a key: 'Changeover Toggle' or 'Changeover to Primary' | Failure and error status checked before a manual changeover: Changeover only, if the currently inactive source has not more failures than the currently active source. | Changeover forced by a keystroke occurs regardless of any errors or failures. |

In the automatic mode, the module tries to output a "good" signal while avoiding any unnecessary changeover. This leads to a sophisticated changeover characteristic. All the major errors will be considered. In brief, a changeover to the back-up signal occurs if the primary input

- has major errors and the back-up not,
- has a 'timeout' error and the back-up not.

Changeover from the back-up to the primary signal works in the same way.

The changeover characteristic can be modified by setting the 'disabled' bit for individual major errors. An error which is not enabled to become a failure will be ignored for the changeover. This allows you to adapt the changeover characteristic to your application.



2.4 Real-Time Reference Monitoring

2.4.1 Overview

The inputs PPS IN and RXD IN at the REF IN connector are provided to connect signals of a real-time reference. These inputs are hard wired to both the REF OUT connectors (1 to 2 distribution).


PPS IN: "Pulse Per Second" input, electrical - for example - a TTL pulse (see chapter 'Specifications'). Positive edge = Time reference mark.

RXD IN: Serial data string, electrical - for example - RS232 (see chapter 'Specifications'). The data protocol can be selected utilizing one of the configuration tools: At "Reference Format" on the "Switcher" page. For example, the following GPS units require the following protocols:

GNS 10 MHz
G16, G19

Meinberg Std 2400/7e2 + PPS
NMEA \$GPRMC 4800/8n1 + PPS

Example: PPS IN (yellow) and RXD IN (blue):

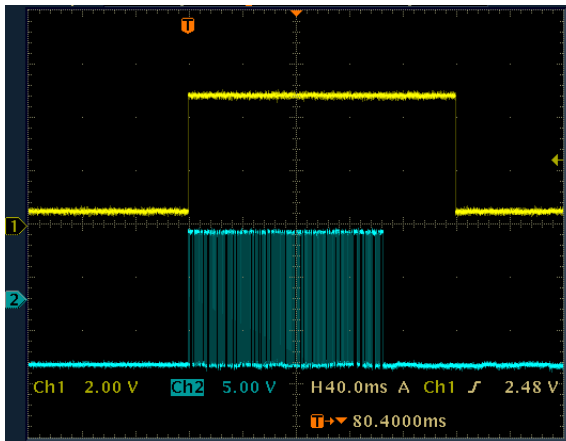

These signals are used to calculate and monitor the time difference and drift of the LTC signals against the real-time reference. This monitoring requires faultless real-time reference signals. For example, the serial data string has to be synchronized to the PPS.

In case of a changeover event, the time of this event will be derived from the time & date of the real-time reference.

Errors and status information will be indicated at the **Reference** page of the status monitor (chapter 'Status Monitor' → 'Status of the Real-Time Reference').

An LED (e.g. SET – RUB1 modules only) programmed as "Switcher Set" lights up if the module receives valid signals (PPS and RXD).



2.4.2 The Individual Errors and Consequences of Errors

The following errors will be indicated at the **Reference** page of the status monitor:

| | status | counts | fail | disabled |
|-----------------|--------|--------|------|----------|
| pps timeout | 0 | 0 | 0 | 1 |
| pps timing | 0 | 0 | 0 | 1 |
| serial timing | 0 | 0 | 0 | 1 |
| serial sequence | 0 | 0 | 0 | 1 |

Chapter 'Overview of Error Indications at the Status Monitor' describes the meaning of **status**, **counts**, **fail**, and **disabled**.

pps timeout Signal loss at the PPS input: no valid PPS detected since 1.6 s.

pps timing PPS signal disturbance: the interval between two consecutive PPS signals does not correspond to one second

serial timing Serial data string at RXD IN either is lost or is not synchronized with the PPS signal.

serial sequence A time discontinuity has been detected while checking the time & date information of the serial data string. This leads to an error even at a valid time discontinuity in case of a leap second or a DST switching if a local time zone has been selected as reference.

Each error has the following consequences:

- Indication of an error at the status monitor ('status' = 1).
- Error counter counts one up.
- Counter 'overall errors' counts one up.
- LED programmed as 'Switcher Error' lights up (RUB1 version modules).
- GPI output programmed as 'System Error' becomes active.
- SNMP trap 'System Error' will be sent.

Each error has additional the following consequences if the corresponding 'disable' checkbox has not been checked:

- Indication of a failure at the status monitor ('fail' = 1).
- Counter 'overall failures' counts one up.
- Lamp programmed as 'Fail' lights up (RUB1 version modules).
- GPI output programmed as 'System Failure' becomes active.
- SNMP trap 'System Failure' will be sent.
- The log file of an Ethernet module receives an entry.

Each 'current sequence' error produces an entry in the log file of an Ethernet module.

- Chapter 'Alarms by GPI Outputs'.
- Chapter 'Alarms by SNMP Traps'.
- Chapter 'Entries in the Log File of an Ethernet Module'.



This table shows all the individual errors and their consequences:

| | | | pps timeout | pps timing | serial timing | serial sequence |
|----------------|------------------------------------|-----------------------------|-------------|------------|---------------|-----------------|
| Status Monitor | status | sets bit to 1 | yes | yes | yes | yes |
| | counts | counts + 1 | yes | yes | yes | yes |
| | overall errors | counts + 1 | yes | yes | yes | yes |
| | fail | sets bit to 1 | yes* | yes* | yes* | yes* |
| | overall failures | counts + 1 | yes* | yes* | yes* | yes* |
| LED Lamp | LED function Switcher Error | LED (ERROR) lights up | yes | yes | yes | yes |
| | Lamp function Fail | Lamp (FAIL) lights up | yes* | yes* | yes* | yes* |
| GPI | System Warning | | yes* | yes* | yes* | yes* |
| | System Error | (if "overall errors" > 0) | yes | yes | yes | yes |
| | System Failure | (if "overall failures" > 0) | yes* | yes* | yes* | yes* |
| SNMP | System Warning | | yes* | yes* | yes* | yes* |
| | System Error | (if "overall errors" > 0) | yes | yes | yes | yes |
| | System Failure | (if "overall failures" > 0) | yes* | yes* | yes* | yes* |
| Log | Event SL | | yes* | yes* | yes* | yes* |

yes*: "yes" under the condition that the corresponding "disable" checkbox has not been checked, i.e. the status monitor shows "disabled" = 0.



2.5 Self Test

Apart from checking the LTC signals and the signals of the real-time reference, the module performs a self test.

The following errors will be indicated at the **System** page of the status monitor:

| | status | counts | fail | disabled |
|----------|--------|--------|------|----------|
| power on | 0 | | 0 | 0 |
| relay 1 | 0 | 0 | 0 | 0 |
| relay 2 | 0 | 0 | 0 | 0 |

Chapter 'Overview of Error Indications at the Status Monitor' describes the meaning of **status**, **counts**, **fail**, and **disabled**.

'power on': After the power has turned on, the non-volatile data will be checked for plausibility, for example regarding the set-up of the module. In case of any implausibility, a 'power on' error will be indicated.

'relay 1' and 'relay 2': The latching relays can be monitored through internal sense signals. If any sense signal does not correspond to the intended switching position, a 'relay 1' resp. 'relay 2' error will be indicated.

Each error has the following consequences:

- Indication of an error at the status monitor ('status' = 1).
- In case of error 'relay 1' or 'relay 2': Error counter counts one up.
- Counter 'overall errors' counts one up.
- LED programmed as 'Switcher Error' lights up (RUB1 version modules).
- GPI output programmed as 'System Error' becomes active.
- SNMP trap 'System Error' will be sent.

Each error has additional the following consequences if the corresponding 'disable' checkbox has not been checked:

- Indication of a failure at the status monitor ('fail' = 1).
- Counter 'overall failures' counts one up.
- Lamp programmed as 'Fail' lights up (RUB1 version modules).
- GPI output programmed as 'System Failure' becomes active.
- SNMP trap 'System Failure' will be sent.
- The log file of an Ethernet module receives an entry.

→ Chapter 'Alarms by GPI Outputs'.

→ Chapter 'Alarms by SNMP Traps'.

→ Chapter 'Entries in the Log File of an Ethernet Module'.



This table shows all the individual errors and their consequences:

| | | | power on | relay 1 | relay 2 |
|----------------|------------------------------------|-----------------------------|----------|---------|---------|
| Status Monitor | status | sets bit to 1 | yes | yes | yes |
| | counts | counts + 1 | no | yes | yes |
| | overall errors | counts + 1 | yes | yes | yes |
| | fail | sets bit to 1 | yes* | yes* | yes* |
| | overall failures | counts + 1 | yes* | yes* | yes* |
| LED Lamp | LED function Switcher Error | LED (ERROR) lights up | yes | yes | yes |
| | Lamp function Fail | Lamp (FAIL) lights up | yes* | yes* | yes* |
| GPI | System Error | (if "overall errors" > 0) | yes | yes | yes |
| | System Failure | (if "overall failures" > 0) | yes* | yes* | yes* |
| SNMP | System Error | (if "overall errors" > 0) | yes | yes | yes |
| | System Failure | (if "overall failures" > 0) | yes* | yes* | yes* |
| Log | Event SL | | yes* | yes* | yes* |

yes*: "yes" under the condition that the corresponding "disable" checkbox has not been checked, i.e. the status monitor shows "disabled" = 0.



2.6 Alarms

2.6.1 Overview and Suggestions for Installation

In order to get aware of a problem, the module could periodically be checked (status monitor, LEDs, lamps, log file of the Ethernet module), or the module could be integrated into a management and control system via GPI and/or SNMP.

These are the suggestions for using the GPI and SNMP features.

The usage of the **Signal 1/2 Failure** and **Signal 1/2 Warning** alarms offers the advantage that the problem directly can be related to source *LTC/MTD IN 1* or *LTC/MTD IN 2*. Additionally, it is possible to distinguish between failures (major errors) and warnings (minor errors). These alarms indicate real LTC problems; none of these alarms should be raised in an LTC system during normal 24 hours operation. A warning indicates a situation which may lead to a major problem if no interaction will take place.

In case of a GPI connection, these advantages are given only if the GPI outputs are connected separately to inputs of an alarm management system.

The „tc/tc difference“ error as well as the errors with respect to the real-time reference and self test are missing if only these alarms are considered.

A complete monitoring can be realized using only one type of alarm: **System Error** or **System Failure**. Both alarms are available with firmware version 2.10.19 or higher. In case of an alarm, the cause of the alarm can be found quickly utilizing the status monitor.

System Error: This alarm offers monitoring with highest sensibility. Every error will raise this alarm. There is no way to disable any individual failure indication. Even a valid (LTC or reference) time discontinuity in case of a leap second or a DST switching of a local time zone raises an alarm (“current sequence“ or “serial sequence“ error).

System Failure: Basically, this alarm combines all failures. The “current sequence“ error will not be a failure. Only those errors which are enabled to indicate a failure can raise an alarm. So, your configuration determines which of the LTC errors, errors with respect to the real-time reference, and errors with respect to the self test, are considered for sending an alarm. This way, an alarm in case of a valid time jump can be avoided. If an “SR“ module is part of the system to monitor the real-time reference, all failure indications for the real-time reference can be disabled at the **SL** module.

The **Signal 1/2 Failure** and **Signal 1/2 Warning** alarms will become inactive automatically as soon as the individual errors have disappeared. The **System Error** and **System Failure** alarms remain active until a manual reset of the error counters.

Using GPI outputs requires a proper configuration (→ chapter ‘Alarms by GPI Outputs’) and – of course – a proper cabling.

Using SNMP traps requires a proper configuration (→ chapter ‘Alarms by SNMP Traps’) and an Ethernet module (**RUB IE** or **RUB PM**) as part of this RUBIDIUM system.



2.6.2 Alarms by GPI Outputs

The module has four GPIs (General Purpose Interfaces). Basically, the functions of these outputs are programmable utilizing the **Keys** function of one of the configuration tools. (→ Chapter 'The Rubidium Configuration Tools' → "'Keys": Keys and Lamps, LEDs and GPIs')

The following functions for the GPIs are provided to indicate errors and failures:

Signal 1 Failure Recommended GPI: **GPI_1**

Signal 2 Failure Recommended GPI: **GPI_2**

Active, as long as there is a major error at LTC of *LTC/MTD IN 1* or *LTC/MTD IN 2* respectively. In detail, this GPI becomes active if one of the following errors has occurred and this error has been enabled to indicate a failure (checkbox "**disable**" not checked):

[sequence](#)
[frame rate](#)
[timeout](#)
[tc/ref fail](#)

Please refer to chapter 'LTC Monitoring' for a detailed error description.

Signal 1 Warning Recommended GPI: **GPI_3**

Signal 2 Warning Recommended GPI: **GPI_4**

Active, as long as there is a minor error at LTC of *LTC/MTD IN 1* or *LTC/MTD IN 2* respectively. In detail, this GPI becomes active if one of the following errors has occurred and this error has been enabled to indicate a failure (checkbox "**disable**" not checked):

[tc/ref error](#)
[lock range](#)
[lock drift](#)

Please refer to chapter 'LTC Monitoring' for a detailed error description.

System Error Available with firmware version 2.10.19 or higher

Active, as long as the "**overall errors**" counter has a count value > 0.

The error indication cannot be disabled, so this GPI becomes active in case of any error, i.e. LTC errors, errors with respect to the real-time reference, and errors with respect to the self test.

System Failure Available with firmware version 2.10.19 or higher

Active, as long as the "**overall failures**" counter has a count value > 0.

Apart from the "**current sequence**" error, all other individual errors can raise this alarm provided this error has been enabled to indicate a failure (checkbox "**disable**" not checked). Depending on this configuration, LTC errors, errors with respect to the real-time reference, and errors with respect to the self test, may activate this GPI output.

More GPI functions: → Chapter "'Keys": Keys and Lamps, LEDs and GPIs'.



2.6.3 Alarms by SNMP Traps

SNMP functionality for a RUBIDIUM system requires the installation of an Ethernet module (**RUB IE** or **RUB PM**) with option **S** (SNMP).

Utilizing one of the configuration tools, the SNMP traps can be enabled and disabled at the **System** page (please refer to chapter *“System”: Identification, Reset, SNMP, Fan Control*). The “Any Trap” checkbox in general controls the SNMP traps functionality. Furthermore, there are checkboxes corresponding to all the individual traps.

Recommended configuration: Check the “Any Trap” and “System Failure” checkboxes.

This chapter describes all the alarm functions for traps. The following feature is valid for all these traps: As long as the alarm condition is present, traps will be repeated in an 8 hours interval.

Signal 1 Failure / Signal 2 Failure Check the “Signal Failure” checkbox

Trap will be sent, as long as there is a major error at LTC of *LTC/MTD IN 1* or *LTC/MTD IN 2* respectively. In detail, this trap will be sent if one of the following errors has occurred and this error has been enabled to indicate a failure (checkbox “**disable**” not checked):

sequence
frame rate
timeout
tc/ref fail

Please refer to chapter ‘LTC Monitoring’ for a detailed error description.

Signal 1 Warning / Signal 2 Warning Check the “Signal Warning” checkbox

Trap will be sent, as long as there is a minor error at LTC of *LTC/MTD IN 1* or *LTC/MTD IN 2* respectively. In detail, this trap will be sent if one of the following errors has occurred and this error has been enabled to indicate a failure (checkbox “**disable**” not checked):

tc/ref error
lock range
lock drift

Please refer to chapter ‘LTC Monitoring’ for a detailed error description.

System Error Check the “System Error” checkbox

Active, as long as the “**overall errors**” counter has a count value > 0 .

The error indication cannot be disabled, so this trap will be sent in case of any error, i.e. LTC errors, errors with respect to the real-time reference, and errors with respect to the self test.

System Failure Check the “System Failure” checkbox

Active, as long as the “**overall failures**” counter has a count value > 0 .

Apart from the “**current sequence**” error, all other individual errors can raise this alarm provided this error has been enabled to indicate a failure (checkbox “**disable**” not checked). Depending on this configuration, LTC errors, errors with respect to the real-time reference, and errors with respect to the self test, may activate this trap.



2.6.4 Entries in the Log File of an Ethernet Module

The use of the log file requires the installation of an Ethernet module (**RUB IE** or **RUB PM**).

As it is shown in the tables of chapters:

- 'LTC Monitoring' – 'Consequences of Errors',
- 'Real-Time Reference Monitoring' – 'The Individual Errors and Consequences of Errors',
- 'Self Test',

every error can produce an entry in the log file if the corresponding '**disable**' checkbox has not been checked.

Additional entries can be produced triggered by the following events:

- LTC '**current sequence**' error,
- manual or automatic changeover,
- error reset – pressing key FAIL (or any key assigned with the '**Reset All**' function) or clicking the '**Error Reset**' button at the **Switcher** page of any configuration tool.

Open the log file clicking on **/public/system.log** at the **System** page of an Ethernet module.

Example: (SL 2:1) identifies the module which sent this entry:

SL module located at frame address **2** at slot **1**.

[22/Apr/2013 14:01:20] (SL 2:1) Event: LTC IN1 signal loss

[22/Apr/2013 14:01:20] (SL 2:1) Event: System automatic changeover

[22/Apr/2013 14:01:28] (SL 2:1) Event: System manual changeover

[22/Apr/2013 14:01:29] (SL 2:1) Event: System error reset

The Ethernet module adds a time stamp (time & date) = time of its internal clock when it receives the entry.


If **SL** receives real-time reference signals and no other module of the system sends the 'Reference' telegram, this telegram should be sent from **SL** module (see chapter "'Link': Communication between Modules'). This telegram sets and synchronizes the internal clock of the Ethernet module. The time stamps of each entry now correspond to the UTC time & date of the event.



3 Status Monitor

3.1 Status Monitor by the Ethernet Module

The RUBIDIUM SERIES HTTP server, which is located in the Ethernet module (**RUB IE** or **RUB PM**), offers a status monitor. Please refer to the 'Functional Descriptions and Specifications RUB Ethernet' manual for a detailed description of how to access the RUBIDIUM SERIES system and how to open the RUBIDIUM homepage.

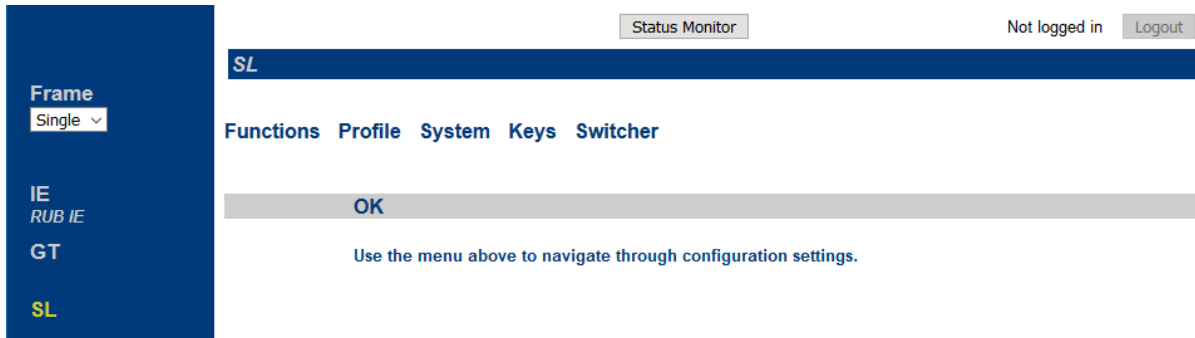

- On the left click to **SL**.
- Click on the button **Status Monitor** to open the **SL** status monitor.

Requirements:


- Please have Java Runtime Environment 1.6.0 or higher installed (for example download at www.java.com).
- Java should be installed as a browser plug-in (a Windows installation will do this automatically if you download Java from the source mentioned above).
- The Status Monitor works with all operating systems which support Java.

3.2 Status Monitor by a PC Program

The PC program **RubStatSE.exe** uses the **PC** interface (RS232 or USB) of the RUBIDIUM housing. This program is part of the "Rubidium Series, config software" packet you can download at:

<https://plurainc.com/products/sl/>.

Execute this program, select the COM port or USB connection and press the **scan** button to get a list of the modules plugged to this housing. Select the module and press the **connect** button.

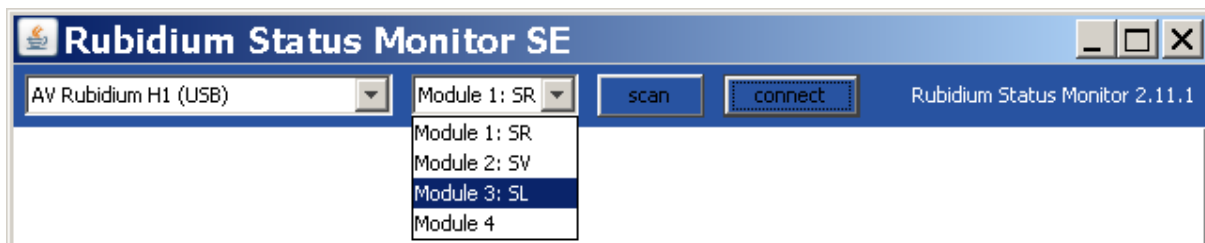

Requirements:

- Please have Java Runtime Environment 1.6.0 or higher installed (for example download at www.java.com).
- For a Windows operating system: Please follow the description of **RubStatSE_Readme.txt**.
- For a Linux operating system: Available on request.



3.3 System Status

The system status and individual system error sources are considered for monitoring only, they have no effects on the automatic changeover characteristics.



System Set-Up

Reflects the set-up as selected by a configuration tool
(see chapter *“Switcher”: Set-Up the Monitoring and Changeover’*).



System Tally

Reflects the state of the relays, the GPIs, the lamps and the LEDs. The GPIs, lamps and LEDs have programmable functions. For service purpose, 'System Tally' reflects the state of the default function, independent of what has been really assigned to.

- relay 1** Sense of 1st relay (changeover LTC/DRVSEL): 0 = primary, 1 = back-up
- relay 2** Sense of 2nd relay (changeover SERIAL/TELEGRAM): 0 = primary, 1 = back-up
- GPIs:** 0 = output/function inactive, 1 = output/function active.
 - gpi 1** 'Signal 1 Failure': Any major error at LTC/MTD IN 1 detected.
 - gpi 2** 'Signal 2 Failure': Any major error at LTC/MTD IN 2 detected.
 - gpi 3** 'Signal 1 Warning': Any minor error at LTC/MTD IN 1 detected.
 - gpi 4** 'Signal 2 Warning': Any minor error at LTC/MTD IN 2 detected.
- Lamps:** Lamps of the keys. 0 = off/function inactive, 1 = on/function active.
 - lamp 1** 'Fail': = 1 if any failure has happened ("overall failures" > 0).
 - lamp 2** 'Primary': = 1 if output switched to LTC/MTD IN 1 (relays in primary position).
 - lamp 3** 'Signal 1 present': = 1 if LTC at LTC/MTD IN 1 is present.
 - lamp 4** 'Signal 2 present': = 1 if LTC at LTC/MTD IN 2 is present.
- LEDs:** 0 = off/function inactive, 1 = on/function active.
 - led 1** 'Operation': = 1 during normal operating.
 - led 2** 'Switcher signal': = 1 if LTC at LTC/MTD IN 1 **and** LTC/MTD IN 2 is present.
 - led 3** 'Switcher set': = 1 if real-time reference signals (PPS IN, RXD IN) are present.
 - led 4** 'Switcher error': = 1 as long as "overall errors" counter > 0.

System Status

- output** LTC/MTD OUT is currently switched to the primary or the back-up source.
- signals received** LTC monitoring and changeover procedure starts if at least one LTC signal with a valid time code word has been detected.
- overall failures** Current value of the "overall failures" counter.
- overall errors** Current value of the "overall errors" counter.
- tc/tc difference** Current time difference between the LTC signals, HH:MM:SS and milliseconds. A "+" sign means: Signal at LTC/MTD IN 1 is equal or ahead of signal at LTC/MTD IN 2. A valid/invalid flag indicates whether the current difference is valid or not.
- max difference** Maximum value of "tc/tc difference", HH:MM:SS and milliseconds.

Changeover events: Number of automatic/manual changeover events. Kind and time (LTC times and date & time of the real-time reference) of the last event.

Individual system errors:

| Error | Description |
|------------------|--|
| power on | Check after power has turned on: Invalid set-up parameters found and/or latching relay error found. There is no individual counter for this error. |
| relay 1 | Relay 1 (LTC/DRVSEL changeover): Actual position not equal to intended position. |
| relay 2 | Relay 2 (SERIAL/TELEGRAM/SPARE changeover): Actual position not equal to intended position. |
| tc/tc difference | The time difference between the LTC signals equals or exceeds the limit "Limit TC/TC". |



3.4 Signal Input Status

This module decodes and monitors LTC signals at *LTC/MTD IN 1* and *LTC/MTD IN 2*.

The individual errors separately detected for signals at *LTC/MTD IN 1* and *LTC/MTD IN 2* are divided into major and minor errors:

- The **changeover & monitoring** table shows the major errors which are considered for a changeover.
These errors can raise an alarm of type "Signal 1 Failure" or "Signal 2 Failure" respectively.
- The **monitoring** table shows the minor errors which are not considered for a changeover.
These errors can raise an alarm of type "Signal 1 Warning" or "Signal 2 Warning" respectively.

The status monitor shows at **Input 1** and **Input 2** page:

System Input 1 | Input 2 | Reference | Fan Monitor |

Input TC 1

| | | | | | |
|------------------------------------|---------------------|-------------------|-------------|-----------------|--|
| time | 10 : 56 : 39 | frame rate | 25 | | |
| user | 03 10 12 10 | bits | 10 | | |
| tc/ref difference | - 00 : 00 : 00 : 00 | | 4,201 ms | | |
| max difference | 00 : 00 : 00 : 00 | | 4,233 ms | valid | |
| drift | 0,5 ms | | ready | | |
| | status | counts | fail | disabled | |
| changeover & monitoring | | | | | |
| sequence | 0 | 0 | 0 | 0 | |
| frame rate | 0 | 0 | 0 | 0 | |
| timeout | 0 | 0 | 0 | 0 | |
| tc/ref fail | 0 | 0 | 0 | 0 | |
| monitoring | | | | | |
| tc/ref error | 0 | 0 | 0 | 0 | |
| lock range | 0 | 0 | 0 | 0 | |
| lock drift | 0 | 0 | 0 | 0 | |
| current sequence | 0 | 0 | | | |

Module version 2.10.19.32 (SL)




Input 1 and **Input 2** show the same items.

| | |
|------------------------------------|--|
| time | Time information decoded out of the LTC signal: HH:MM:SS. |
| user | Binary groups decoded out of the LTC signal. |
| frame rate | The LTC frame rate as selected via configuration. |
| bits | The six LTC flag bits shown in a hexadecimal way. |
| tc/ref difference | Current time difference of LTC against real-time reference, HH:MM:SS and milliseconds. A "+" sign means: LTC is equal or ahead of real-time reference. A valid/invalid flag indicates whether the current difference is valid or not. |
| max difference | Maximum value of "tc/ref difference", HH:MM:SS and milliseconds. |
| drift | Current drift of the LTC compared to the PPS of the real-time reference. This measurement starts with a 30 minutes delay after the power has turned on to give time for synchronization. |
| changeover & monitoring | |
| Error | Description |
| sequence | Multiple dropouts or time discontinuities detected. |
| frame rate | LTC signal with wrong frame rate detected. |
| timeout | No LTC signal detected since 140 ms. |
| tc/ref fail | The time difference of LTC against the real-time reference equals or exceeds the limit "Limit TC/Ref Fail". |
| monitoring | |
| Error | Description |
| tc/ref error | The time difference of LTC against the real-time reference equals or exceeds the limit "Limit TC/Ref Error" |
| lock range | The time difference of LTC against the real-time reference equals or exceeds the limit "Limit Lock", the drift monitor stops. |
| lock drift | The drift of LTC against the real-time reference equals or exceeds the limit "Limit Drift". |
| current sequence | A time discontinuity has been detected while checking the LTC time information. This leads to an error even at a valid time discontinuity in case of a leap second or a DST switching of a local time zone. Different from all other errors, there is no 'fail' and 'disabled' bit provided. |



3.5 Status of the Real-Time Reference

This module monitors the pulse-per-second input signal (PPS), the serial data string with time & date and status information, and the correct timing of both signals with respect to a definite correspondence of the serial data to the PPS signal.

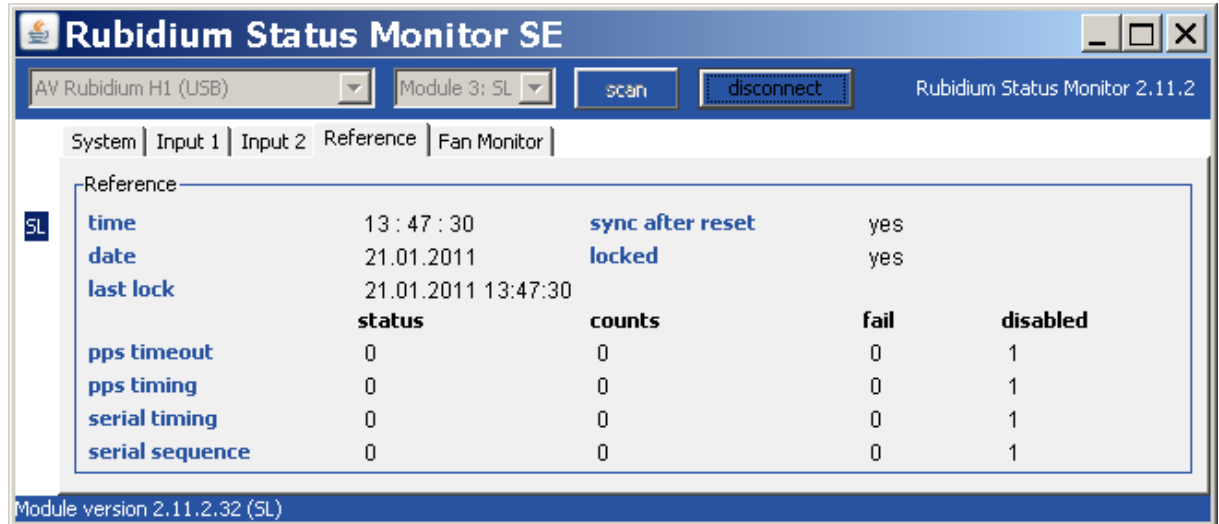

The status and individual errors are considered for monitoring only; they have no effects on the automatic changeover characteristics.

| | |
|------------------------------|---|
| time | Current time, received via serial data string. |
| date | Current date, received via serial data string. |
| sync after reset | Status, received via serial data string. Indicates that the reference source could have been synchronized at least once after turning the power on. |
| locked | Status, received via serial data string. Indicates that the reference source currently is synchronized. |
| last lock | Time & date of the moment of last indication of a “locked” status. |
| Individual reference errors: | |
| Error | Description |
| pps timeout | No valid PPS detected since 1.6 s. |
| pps timing | The interval between two consecutive PPS signals does not correspond to one second. |
| serial timing | The serial data string is not synchronized with the PPS signal. |
| serial sequence | A time discontinuity has been detected while checking the time & date information of the serial data string. This leads to an error even at a valid time discontinuity in case of a leap second or a DST switching if a local time zone has been selected as reference. |



3.6 Status of Fan and Power Supplies

This module – as all configurable RUBIDIUM modules – is able to monitor the fan and power supplies which are plugged to the same housing as **SL**.

The screenshot shows the 'Rubidium Status Monitor SE' software interface. The window title is 'Rubidium Status Monitor SE' and the version is '2.11.1'. The interface displays monitoring data for 'Module 3: SL' connected via 'AV Rubidium H1 (USB)'. The interface is divided into sections for 'Frame', 'Port', 'Fan 1', 'Fan 2', 'Power Supply 1', and 'Power Supply 2', each displaying various status parameters.

| Frame | | Port | |
|--------------------------|--------------------|-------------|-----|
| housing | H1 (or D1, S1, T1) | detected | yes |
| fan and ps monitoring | yes | failure | no |
| port monitoring | yes | address | 2 |
| fan failure | no | termination | off |
| ps failure | no | | |
| fans and ps monitored by | this unit | | |

| Fan 1 | | Fan 2 | |
|-----------|-------|-----------|------|
| detected | yes | detected | no |
| failure | no | failure | no |
| fan fault | no | fan fault | no |
| alarm | no | alarm | no |
| temp | 39 °C | temp | 0 °C |

| Power Supply 1 | | Power Supply 2 | |
|----------------|--------|----------------|-------|
| detected | yes | detected | no |
| failure | no | failure | no |
| alarm | no | alarm | no |
| temp | 44 °C | temp | 0 °C |
| 24V output | 23,9 V | 24V output | 0,0 V |
| 24V at frame | 23,7 V | 24V at frame | 0,0 V |

Module version 2.10.20.32 (SL)

Please refer to the document 'Installation & Systems Manual RUBIDIUM SERIES' for a detailed description.



4 The Rubidium Configuration Tools

4.1 The Rubidium Configuration PC Program

Please refer to the

'Installation & Systems Manual RUBIDIUM SERIE'

for a general description of this program and how to install it. In this document please notice the following subchapters:

- Overview
- Installation
- Connection to RUBIDIUM SERIES Chassis
- Starting the Program
- Store, Load and Update the Configuration on your PC
- The "Profile" Tab: Store and Load Configurations on the Module

The program RUBIDIUM CONFIGURATION uses various tab cards. With one click on the button **Configure**, all available and currently activated tabs of this specific module are displayed.

Any changes at a tab will immediately be stored at the module. If you enter a number or a text press the **tabulator key** at the PC's keyboard afterwards.

4.2 The Rubidium Series HTTP Server

The RUBIDIUM SERIES HTTP server is located in the Ethernet module (**RUB IE** or **RUB PM**). A 10/100Base-T Ethernet connection and a web browser allow access to the RUBIDIUM system.

Please refer to the *'Functional Descriptions and Specifications RUB Ethernet'* manual for a detailed description of how to access the RUBIDIUM SERIES system.

- Click on "Configuration" at the RUBIDIUM homepage to open the **Configuration** page.
- Click on the blue **SL** button to establish a communication to this module. It opens a page with a list of all the links which correspond to all the available functions.

Changes at a page will not be stored at the module automatically. At the bottom of each page there are two buttons which should be used to store or load the module's configuration:

Button **Save To Module**:

- Click on this button to transfer all settings on this page to the module.

Button **Reload From Module**:

- Click on this button to load the current configuration of the module.




Every time you click on the blue button which indicates the module under configuration, a **Reload** will be done automatically.



4.3 “Functions“

Click on **Functions** to see all applicable tabs/pages listed, and to activate or deactivate tabs/pages. For example (screen shot of the PC program tab):

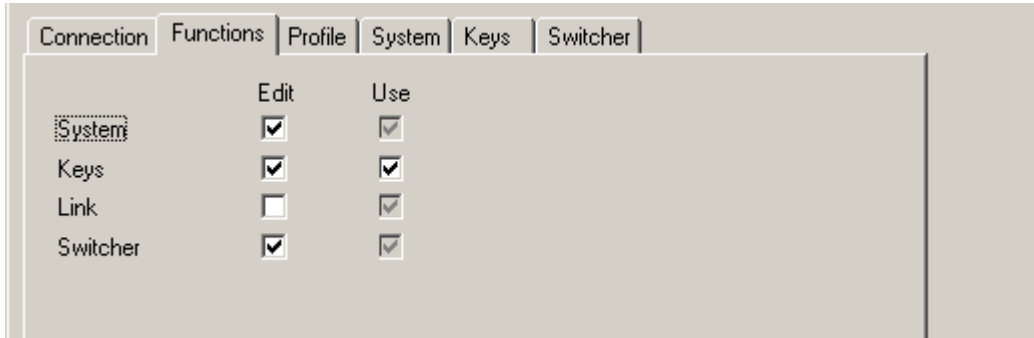

A tab/page reflects a function of the module. The columns **Edit** and **Use** determine whether the function in the module is activated/deactivated and whether user configuration of that specific function is allowed or not.

Click on the applicable **Edit** and/or **Use** check boxes to activate/deactivate a function:

| Edit | Use | |
|------|-----|--|
| | | Function is deactivated, the tab/page is not visible. |
| √ | √ | Function is activated, the tab/page is visible and configurable. |
| | √ | Function is activated but the tab/page not visible and therefore not configurable. |

- We suggest that you deactivate the **Use** check boxes of all functions you are presently not using.
- We suggest that you deactivate the **Edit** check boxes of all functions you are presently not configuring. That avoids unintentional operating and malfunctions.

List of tabs/functions:

- Profile** Store and Load Configurations on the Module (*)
- System** Identification, Reset, SNMP, Fan Control
- Keys** Keys and Lamps, LEDs and GPIs
- Switcher** Set-Up the Monitoring and Changeover
- Link** Communication between Modules


(*) refer to “Installation & Systems Manual RUBIDIUM SERIES”




4.4 “Keys“: Keys and Lamps, LEDs and GPIs

The module has four GPIs (General Purpose Interface), the RUB1 module additionally has four illuminated buttons (keys and lamps) and four LEDs (Light Emitting Diodes). Basically, the functions of these in- and outputs are programmable.

*Some functions presented by the configuration tool maybe assigned to special options, and therefore are not applicable with the standard firmware. For further information please contact **Plura**.*

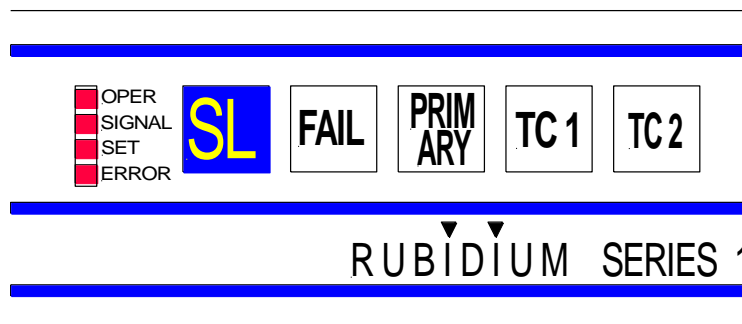

Configuration (example shows a screen shot of the PC program tab):

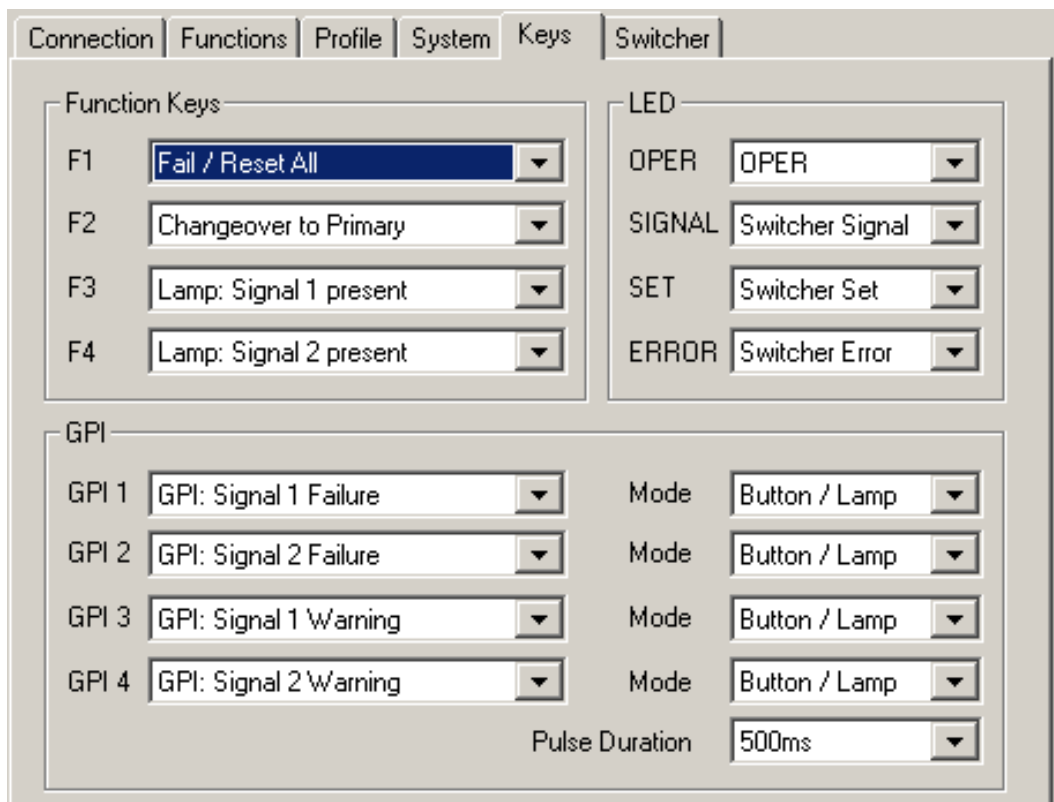

The following functions for the **keys** are provided for this module:

| Function | Description | Recommended Key |
|-----------------------|--|-----------------|
| Clear | Resets all error counters. | F1: FAIL |
| Reset All | Resets all error counters and status. | F1: FAIL |
| Changeover to Primary | Manual changeover to "primary" source (<i>LTC/MTD IN 1</i>): <u>Automatic</u> mode: Changeover occurs only if the signal at <i>LTC/MTD IN 1</i> has not more failures than <i>LTC/MTD IN 2</i> . <u>Manual</u> mode: Changeover occurs without signal check. | F2: PRIMARY |
| Changeover Toggle | Manual changeover: <u>Automatic</u> mode: Changeover occurs only if the signal to which switching shall occur has not more failures than the current output signal. <u>Manual</u> mode: Changeover occurs without signal check. | F2: PRIMARY |

The following functions for the **lamps** are provided for this module:

| Function | Description | Recommended Lamp |
|---|--|------------------|
| Fail | Lights up, as long as the "overall failures" counter has a count value > 0. | F1: FAIL |
| Switcher on Primary Changeover Toggle Changeover to Primary | Lights up, if the output is switched to <i>LTC/MTD IN 1</i> (primary source). | F2: PRIMARY |
| Signal 1 present | Lights up, if LTC at <i>LTC/MTD IN 1</i> is present. Flashes to indicate an imminent timeout. | F3: TC 1 |
| Signal 2 present | Lights up, if LTC at <i>LTC/MTD IN 2</i> is present. Flashes to indicate an imminent timeout. | F4: TC 2 |

The following functions for the **LEDs** are provided for this module:

| Function | Description | Recommended LED |
|-----------------|---|-----------------|
| OPER | Lights up, if the module is operating. | OPER |
| Switcher Signal | Lights up, if there are LTC signals present at both <i>LTC/MTD IN 1</i> and <i>LTC/MTD IN 2</i> . | SIGNAL |
| Switcher Set | Lights up, if the real-time reference signals are present: PPS and a valid data string. | SET |
| Switcher Error | Lights up, as long as the "overall errors" counter has a count value > 0. | ERROR |



The following functions for the **GPIs** - indicating a **status** - are provided for this module:

| Function | Description | Recommended GPI |
|---------------------|---|-----------------|
| Signal 1 Failure | Indicates a failure at <i>LTC/MTD IN 1</i> . | GPI_1 |
| Signal 2 Failure | Indicates a failure at <i>LTC/MTD IN 2</i> . | GPI_2 |
| Signal 1 Warning | Indicates an error at <i>LTC/MTD IN 1</i> . | GPI_3 |
| Signal 2 Warning | Indicates an error at <i>LTC/MTD IN 2</i> . | GPI_4 |
| System Error | Indicates, that the "overall errors" counter has a count value > 0. | |
| System Failure | Indicates, that the "overall failures" counter has a count value > 0. | |
| Switcher on Primary | Indicates, that the output is switched to the primary source (<i>LTC/MTD IN 1</i>). | |
| Signal 1 present | Indicates, that LTC at <i>LTC/MTD IN 1</i> is present. | |
| Signal 2 present | Indicates, that LTC at <i>LTC/MTD IN 2</i> is present. | |

Additionally, the output characteristic is selectable:

| Dropdown list at Mode | Description |
|------------------------------|--|
| Button/Lamp | Statically, active "Low" [recommended] |
| Inv. Button/Lamp | Statically, active "High" |
| Switch/On Pulse | Pulse, active "Low"; pulse width selectable from 100 ms to 2 s. Pulse will be generated at event entry. |
| Inv. Switch/Off Pulse | Pulse, active "High"; pulse width selectable from 100 ms to 2 s. Pulse will be generated at the end of the event. |

Pulse Duration The pulse width is selectable as 100 ms, 200 ms, 500 ms, 1 s, 2 s. This selection refers to all GPI outputs set to a pulse mode.

Besides the functions described above, each GPI can be programmed to output a hardware-controlled **sync pulse**. For this, the GPI receives the **pulse** function. The kind of sync pulse is fixed according to the following table:


| Function | Description | GPI |
|------------|---|-------|
| GPI: Pulse | LTC_1 "Sync Pulse", positive pulse, width = one LTC bit. | GPI_1 |
| GPI: Pulse | LTC_1 "Start of Frame 0", LTC_1 Sync Pulse once a second. | GPI_2 |
| GPI: Pulse | LTC_2 "Sync Pulse", positive pulse, width = one LTC bit. | GPI_3 |
| GPI: Pulse | LTC_2 "Start of Frame 0", LTC_2 Sync Pulse once a second. | GPI_4 |



4.5 “Switcher“: Set-Up the Monitoring and Changeover

These set-ups are provided for the monitoring and changeover characteristics.

Configuration (example shows a screen shot of the PC program tab):

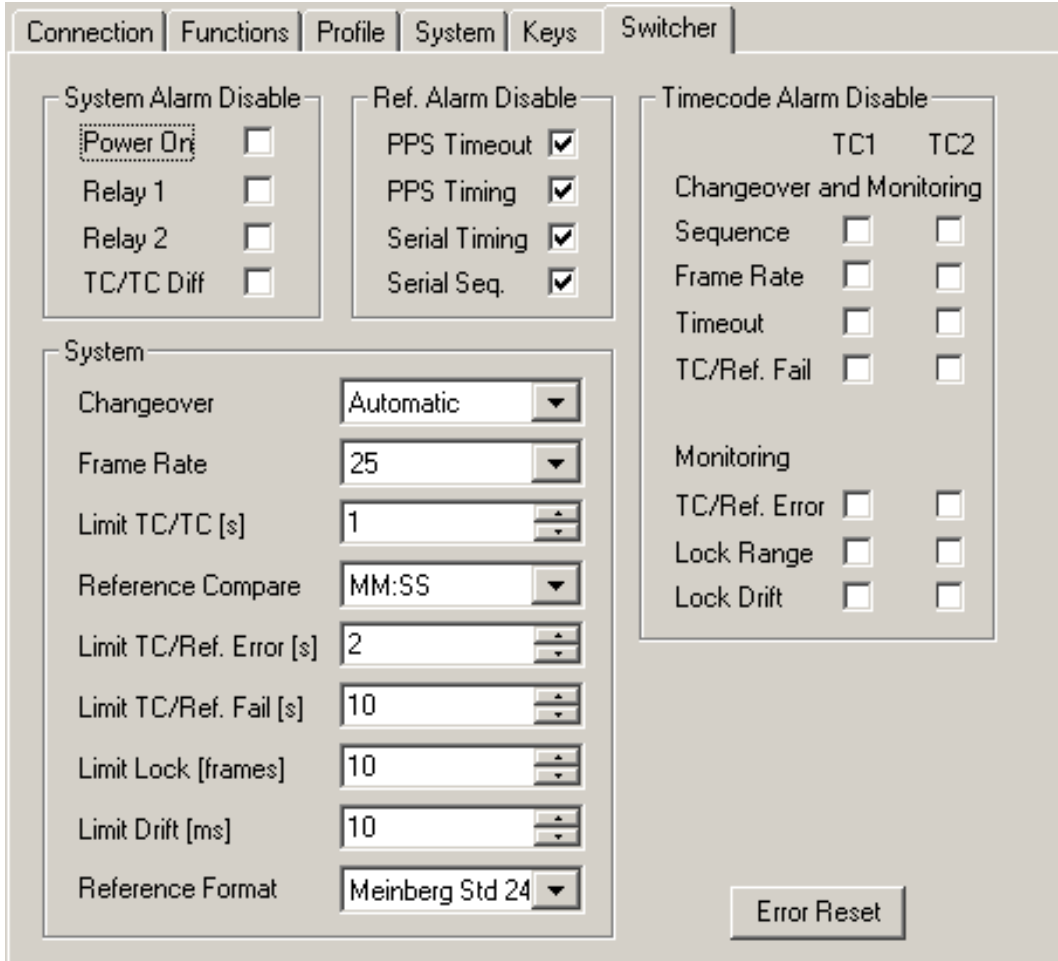

System Alarm Disable

SL monitors some system characteristics. For a detailed description of each item please refer to chapter ‘Self Test’ and – for “TC/TC Diff” – to chapter ‘LTC Monitoring’.

The failure indication of each individual error can be disabled by checking the “disable” checkbox. If disabled, no failure alarm will be given in case of an error.

Ref. Alarm Disable

SL monitors the signals of a real-time reference. For a detailed description of each item please refer to chapter ‘Real-Time Reference Monitoring’.

The failure indication of each individual error can be disabled by checking the “disable” checkbox. If disabled, no failure alarm will be given in case of an error.



Timecode Alarm Disable

SL monitors the LTC of *LTC/MTD IN 1* and *LTC/MTD IN 2*. For a detailed description of each item please refer to chapter “*LTC Monitoring*”.

The failure indication of each individual error can be disabled by checking the “disable” checkbox. If disabled, no failure alarm will be given in case of an error.

Error Reset

Click this button to reset all error counters and status of the module – identical to pressing the FAIL key programmed with the “Reset All” function.

System

Select the operating mode and some parameters (default values in **bold** characters):

| Item | Selection | Description |
|-------------------------------|--|---|
| Changeover | Automatic Manual | Automatic or manual changeover operating mode. → Chapter ‘ <i>LTC Changeover</i> ’. |
| Frame Rate | 25 30 30 df 24 | Adjust the frame rate of the time code. Select 25 in a 625/50 television system (PAL), select 30 df in a 525/60 television system (NTSC). |
| Limit TC/TC [s] | 1 - 9 | SL calculates and monitors the time difference between the LTC signals. A “ <i>tc/tc difference</i> ” error will be indicated if the time difference equals or exceeds this limit. Allowed range: 1 – 9 seconds. → Chapter ‘ <i>LTC Monitoring</i> ’ → ‘ <i>The Individual Errors</i> ’. |
| Ref. Compare | HH:MM:SS MM:SS M:SS SS | SL compares the LTC time with the real-time reference. If the time zone of the LTC time is different from the time zone of the real-time reference, hours or even minutes should not be considered. Please select according to your application. → Chapter ‘ <i>LTC Monitoring</i> ’ → ‘ <i>The Individual Errors</i> ’. |
| Limit TC/Ref. Error [s] | 1 – 9 (2) | SL calculates and monitors the time difference of LTC time against the real-time reference. A “ <i>tc/ref error</i> ” error will be indicated if the time difference equals or exceeds this limit. The corresponding alarm indicates a warning. Allowed range: 1 – 9 seconds. → Chapter ‘ <i>LTC Monitoring</i> ’ → ‘ <i>The Individual Errors</i> ’. |
| Limit TC/Ref. Fail [s] | 10 – 59 | SL calculates and monitors the time difference of LTC time against the real-time reference. A “ <i>tc/ref fail</i> ” error will be indicated if the time difference equals or exceeds this limit. The corresponding alarm indicates a failure. Allowed range: 10 – 59 seconds. → Chapter ‘ <i>LTC Monitoring</i> ’ → ‘ <i>The Individual Errors</i> ’. |



| | | |
|------------------------|---|--|
| Limit Lock [frames] | 1 – 20 (10) | <p>SL monitors the drift of the LTC sync word against the PPS of the real-time reference. If the time difference of LTC time against the reference time equals or exceeds this limit, the drift monitor stops and a “lock range” error will be indicated.</p> <p>Allowed range: 1 – 20 frames.</p> <p>→ Chapter ‘LTC Monitoring’ → ‘The Individual Errors’.</p> |
| Limit Drift [ms] | 10 – 255 (10 PAL) (100 NTSC) | <p>SL monitors the drift of the LTC sync word against the PPS of the real-time reference. If this drift exceeds the limit, a “lock drift” error will be indicated.</p> <p>If you are working in a television system and the video sync generator (SPG) should be locked to a real-time reference, please note:</p> <p>In the 625/50 television system (PAL), no drift should occur, so a value of 10 ms can be selected. The drift will be measured every second.</p> <p>In the 525/60 television system (NTSC), drift measurements may yield a maximum of 86.4 ms over a 24-hour period, so we recommend a value of 100 ms as an appropriate limit. The drift will be measured every 10 minutes.</p> <p>Allowed range: 10 – 255 ms.</p> <p>→ Chapter ‘LTC Monitoring’ → ‘The Individual Errors’.</p> |
| Reference Format | Meinberg Std ... NMEA \$GPRMC... Meinberg Uni ... Wharton Status ... | <p>SL expects a PPS and a serial data string from a real-time reference. The format and protocol of the serial data string should be selected in accordance with the connected device:</p> <p>“Meinberg Std 2400/7e2 + PPS” [GNS 10 MHz] “NMEA \$GPRMC 4800/8n1 + PPS” [G16, G19]</p> <p>If “Meinberg Std 2400/7e2 + PPS” has been selected, SL automatically accepts the “Meinberg GPS” protocol as well.</p> <p>→ Chapter ‘Real-Time Reference Monitoring’.</p> |




4.6 “Link”: Communication between Modules

Link uses the Rubidium internal TC_link interface to transmit or receive data. This interface is shared by all the modules in one frame, and via the **RLC** connector it is possible to link further modules at different frames.

In case that the selected module should transmit data, **Link** selects the channel and the kind of data. The receiving module must select this channel as a reader input.

In case that the selected module should receive data, the **Link** function has to be activated (**Use**), and the selected channel (“Telegram” 1 or 2 or 3) has to be switched off.

Configuration (example shows a screen shot of the PC program tab):

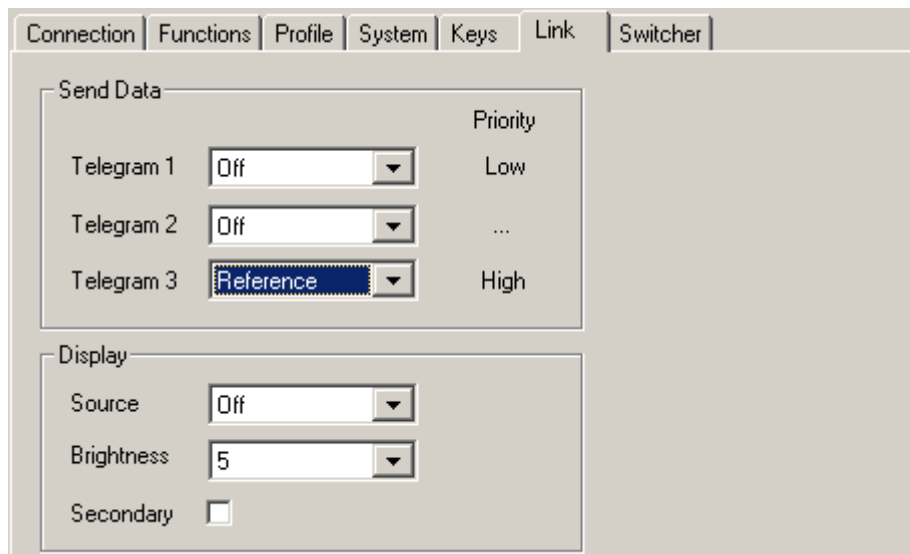

Send Data

Three channels (**Telegram 1 - 3**) have been provided to transmit data.

For each channel a function can be selected from the drop-down list:

Off This channel will not be used to transmit data, data can be received.

Reference This channel transfers time and date (UTC) of the external reference once per second, as long as there are valid signals (PPS IN, RXD IN) at REF IN connector.

Display

Adjust the parameters controlling the display of a RUBIDIUM **D1** or **Q1** chassis.

Source Select the kind of data to be sent and displayed:

Off No data will be sent from this module.

Reference Time Time of the external reference (UTC) in a HH:MM:SS format.

Reference Date Date of the external reference (UTC) in a Day.Month.Year format.

Brightness Adjust the brightness of the LEDs, steps 1 to 7.

Secondary Address the ‘secondary’ display instead of the ‘primary’ display.



4.7 “System“: Identification, Reset, SNMP, Fan Control

Configuration (example shows a screen shot of the PC program tab):

Unit

Name: The connected module can get a name. You may enter, change, or verify this name at this window.

Frame: Modules in a network can be uniquely identified by a frame number and the module's position within the frame. In a single frame system, you may select "Single" or "Auto" at this set-up. If a system is built-up of more than one frame, each frame has to receive a unique address (adjusted at the fan module). If you select "Auto", the module will request this frame number automatically and will show it on the info box. Likewise, it is possible to select a frame number manually.

Boot

Cold Boot: Do a cold boot of the module.

Warm Boot: Do a warm boot of the module.

Info

Displays module's status information.

SNMP Trap Enable

Activate the "Any Trap" check box to enable the SNMP functionality in general. If not checked, this module will not send any SNMP traps.

The individual traps can be enabled/disabled by a click on the corresponding check box. Please notice the chapter 'Alarms by SNMP Traps' as well.

Thermal Control

At least one module of each frame should have the fan monitoring activated. This enables the power supply monitoring – for power supplies within this frame - as well.





Contact Us



Corporate Offices:
Plura Broadcast, Inc.
Ph: +1-602-944-1044
Sales@plurainc.com



Plura Europe GmbH
Ph: +49-6725-918006-70
Sales@plurainc.com

GERMANY



Plura MEA
Ph: +971-50-715-9625
Sales@plurainc.com



Plura Asia
Ph: +82-10-6688-8826
Sales@plurainc.com

S. KOREA

