



TIMING SOLUTIONS

Rubidium Series



RUB IE-M
RUB PM-M

Interface for Communication and Synchronization of an MTDoe System

Functional Description and Specifications
Supplement to “Functional Description and Specifications of RUB Ethernet Modules”
Version: 3.6
September 23, 2021





CONTENTS

A1	REVISION HISTORY	
A2	COPYRIGHT	
A3	GENERAL REMARKS	
1	OVERVIEW	5
2	MTD	6
2.1	SET-UP OF THE CENTRAL MTD UNIT	6
2.2	OPEN THE MTDOE CONFIGURATION	7
2.3	MTDOE STATUS	8
2.4	GROUP PASSWORD	9
3	SEVERAL MTDOE RUB ETHERNET MODULES IN THE SAME NETWORK	10
3.1	REDUNDANT SYSTEM FOR ONE MTDOE GROUP	10
3.2	TWO OR MORE MTDOE GROUPS	11



A1 Revision History

No.	Date	Subject
0.n		Preliminary documents, changes without notice.
1.0	March 25, 2010	First released document.
2.0	September 25, 2012	Completely revised.
3.0	January 23, 2013	Revised.
3.1	February 22, 2013	This option is available for PM modules as well.
3.2	August 26, 2019	Changed address of Plura Europe GmbH.
3.3	September 16, 2020	Clarified that option M requires option N.
3.4	December 3, 2020	Re-formatted in new design.
3.5	February 23, 2021	Remove requirement of option N and NTP server functionality.
3.6	September 23, 2021	Added MTDoE port.

A2 Copyright

Copyright © Plura Europe GmbH 2002-2021. All rights reserved. No part of this publication may be reproduced, translated into another language, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise without the prior written consent of Plura Europe GmbH.

Printed in Germany.

Technical changes are reserved.

All brand and product names mentioned herein are used for identification purposes only and are trademarks or registered trademarks of their respective holders.

Information in this publication replaces all previously published information. Plura Europe GmbH assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein.

For further information please contact your local dealer or:

Plura Europe GmbH
 Binger Weg 12
 D- 55437 Ockenheim
 Phone: +49 6725 918 006-70
 Fax: +49 6725 918 006-77
 E-Mail: info@plurainc.com
 Internet: <http://www.plurainc.com>

A3 General Remarks

This manual is a supplement to the manual

“Functional Description and Specifications of RUB Ethernet Modules”.

It describes a special feature for module **IE** or **PM**, realized by an optional firmware.



1 Overview

Plura has developed a system called the Multiple Time Display (MTD) system. An MTD system consists of a central generator unit, control units, digital displays and/or studio clocks. The central MTD generator (RUB GT) is the time & date reference and manages stop timers.

The MTDoE system utilizes the Ethernet to transport the MTD data as well as to communicate between control units and central generator. The central generator transmits MTD data to the Ethernet module (RUB IE or RUB PM with option M) via the internal TC_link interface of the RUBIDIUM system, the Ethernet module then opens the gates to the network.

MTDoE uses UDP port 8051. As an alternative UDP port 8052 can be used. UDP broadcasts are used for UD's "Automatic MTD Master IP Address" feature.

Please refer to the following documents as well:

Concerning the Ethernet module: „Functional Description and Specifications of RUB Ethernet Modules “.

Concerning MTDoE: “MTD System“ manual.



2 MTD

2.1 Set-Up of the Central MTD Unit

RUB GT module is the central generator of the MTD system.

Details of configuration → *Functional Description and Specifications Module GT.*

The **Group Number** has to be set at RUB GT:

Set-up "MTD Generate".

Example:

MTD over Ethernet "Group = 1".

1: GT

MTD Generate

LTC

Mode

Digits

Main

Main 1

Main 2

Main 3

GPI

Mode

Duration

Time : :

MTD over Ethernet

Group

RUB GT should send data via *TC_link* to the Ethernet module:

Enable telegrams **Reference** and **MTDoE**.

Optionally another telegram can be selected as **Gen**, if any AT/DT/HT/XT or AV/DV/HV/XV module is part of the system. These modules can visibly insert a time, a date, or a stop timer. Using this telegram, such a module can receive data from GT without external cable connection. Software version 2.12.33 or higher enables these modules to decode the "MTDoE" telegram, so in this case it may not be necessary to send a "Gen" telegram.

1: GT

Link

Send Data

		Priority
Telegram 1	<input type="text" value="Off"/>	Low
Telegram 2	<input type="text" value="MTDoE"/>	...
Telegram 3	<input type="text" value="Reference"/>	High

Display

Source

Brightness

Secondary

Save To Module
Reload From Module



2.2 Open the MTDoE Configuration

Open the **Configuration** page with your browser.

Click on the **IE** or **PM** button to open the function menu of the Ethernet module.

The screenshot shows the 'Configuration' page for the 'RUB IE' module. The left sidebar contains 'RUB IE' and 'IE RUB IE' (highlighted in yellow). The main content area has a 'Configuration' header, a 'Logged in as admin' status with a 'Logout' button, and a navigation menu with 'Add User', 'Modify User', 'Delete User', 'Version', 'SNMP', 'MTD', 'NTP Server', and 'System'. The 'OK' button is highlighted in a grey bar, and a message below it says 'Use the menu above to navigate through configuration settings.'

The "MTD" menu indicates status information and enables a basic set-up.

The screenshot shows the 'Configuration' page with the 'MTD' menu item selected and highlighted in a grey bar. The 'Enable' checkbox is checked. The 'Status' section shows: Active Groups: 1, Inactive Groups: 17, Active Operation Mode: Unicast, and Serving Devices: 1: 192.168.0.35 (TCU, Group: 1), 2: 192.168.0.29 (TCU, Group: 1). The 'Settings' section includes: Operation Mode (Auto), MTD Priority (5). The 'Group Password' section includes: Group (1), Group Password, Re-Enter Group Password, and Clear Password (unchecked). At the bottom are buttons for 'Save To Module', 'Reload From Module', and 'Help'.



2.3 MTDoe Status

Shows some status information and enables to set up the network communication method.

Status

Active Groups	1
Inactive Groups	none
Active Operation Mode	Unicast
Serving Devices	1: 192.168.0.53 (TCU, Group: 1)
	2: 192.168.0.54 (TCU, Group: 1)
	3: 192.168.0.64 (Display, Group: 1)
	4: 192.168.0.66 (Display, Group: 1)

Active Groups Shows all active MTD groups. A group becomes “active” for this Ethernet module if this module receives data for this group from an MTD central generator and this module is responsible for the Ethernet communication of this group.

Inactive Groups Shows all inactive MTD groups. A group becomes “inactive” for this Ethernet module if this module receives data for this group from an MTD central generator, but another Ethernet module is responsible for the Ethernet communication of this group.

Active Operating Mode Indicates the selected or used transmission method.

Serving Devices Indicates all devices which are communicating with this Ethernet module.

Settings

Operation Mode	<input type="text" value="Auto"/>
MTD Priority	<input type="text" value="5"/>

Operating Mode *Unicast* and *Broadcast* describe the way of sending messages in computer networking. *Unicast* transmission sends a data packet to a single destination host; *Broadcast* delivers information to a group of destinations simultaneously. Please select:

- Auto (= default)
- Broadcast local
- Unicast only
- Broadcast only

MTD Priority You can assign a priority to the Ethernet module. A higher value means higher priority. In a redundant system with two Ethernet modules in the same network that module with higher priority will be active.

<input type="button" value="Save To Module"/>	<input type="button" value="Reload From Module"/>	<input type="button" value="Help"/>
---	---	-------------------------------------

After any change press the “Save To Module” button to store the entry.



2.4 Group Password

Any MTD group can receive a password. If a password has been set for a group, the **UD SC Config.exe** program has access to the devices of this group only if the password has been entered correctly.

Group Password

Group

Group Password

Re-Enter Group Password

Clear Password

After any change press the "Save To Module" button to store the entry.



3 Several MTDoE RUB Ethernet Modules in the same Network


3.1 Redundant System for one MTDoE Group

Two Ethernet modules with option “M” can be installed to work in parallel. Both modules serve the same MTDoE group; there is only one MTD central unit active in use. Both Ethernet modules receive the same data via TC_link.

If both Ethernet modules are located in the same network, one module will be active; the other module will take over in case of a failure of the active module.


If the Ethernet modules are assigned to different networks, both modules will be active. Redundancy still is given because each MTDoE device knows the IP addresses of both Ethernet modules by manual set-up.

Example:

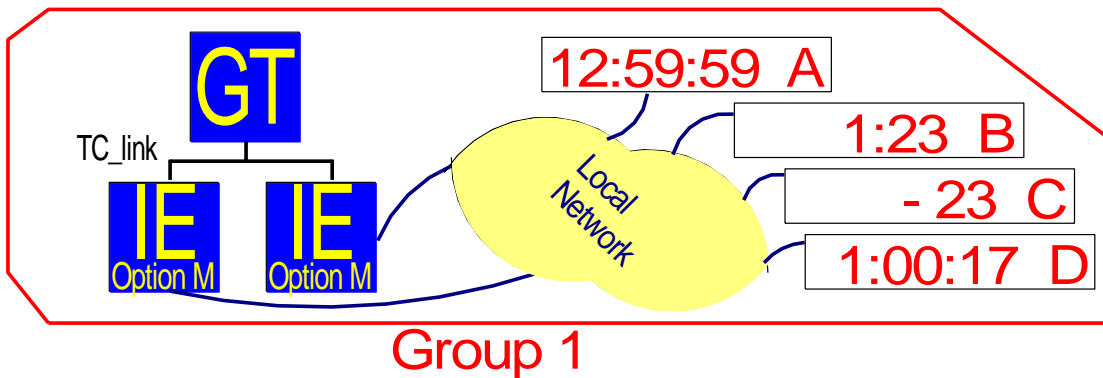

Even if there are two MTD central units for redundancy (two RUB GT modules + RUB SL as changeover unit), there will be one MTDoE group only. Both RUB GT modules have to receive the same set-up. Both RUB GT modules have to be connected to the RUB SL module. All modules have to be connected to the same TC_link interface.

Example:

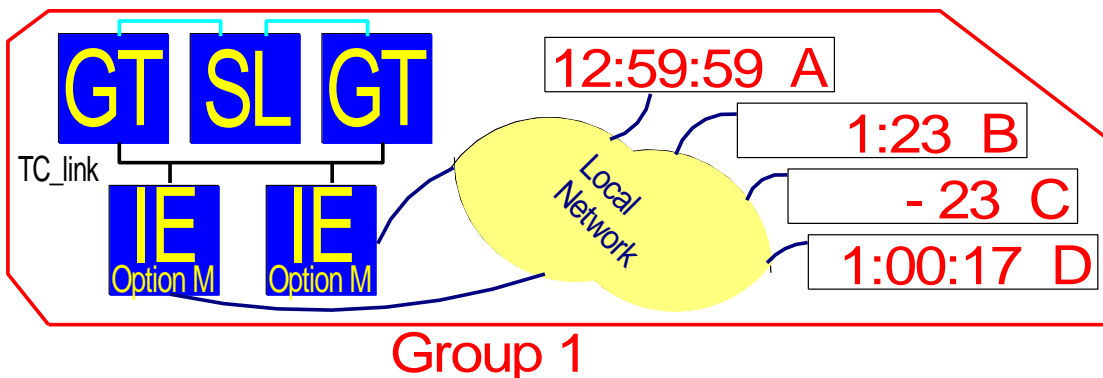


3.2 Two or more MTDDoE Groups

Six independent timers are available in one group. If there is need for more than six timers, a second system can be integrated in the same network; this constitutes a different MTD group. Every MTDDoE device (display, studio clock, control unit) must be assigned to a group, so it has access only to data of this group.

It is recommended to separate each MTD central unit and corresponding Ethernet module from further MTD central units and corresponding Ethernet modules. Do not connect systems to the same *TC_link* interface!

Example:

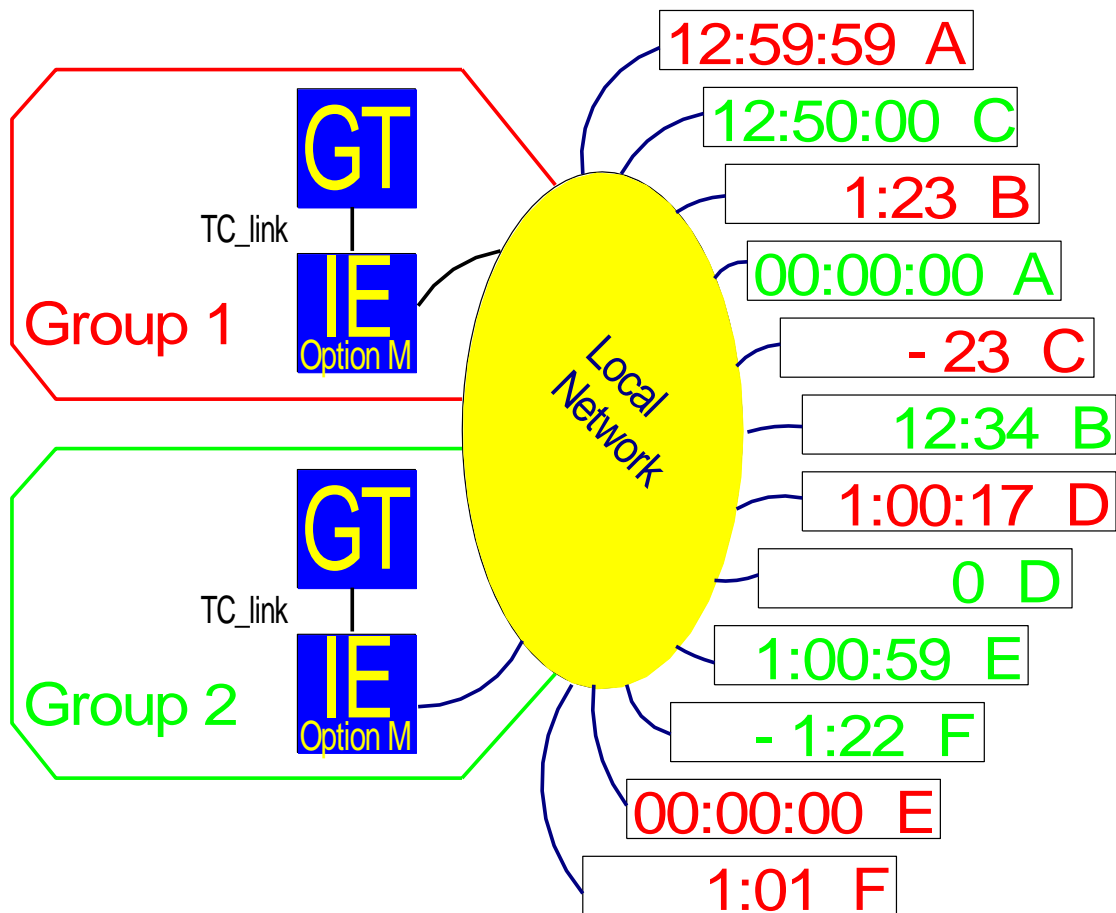

Contact Us



Corporate Offices:
Plura Broadcast, Inc.
Ph: +1-602-944-1044
Sales@plurainc.com



Plura Europe GmbH
Ph: +49-6725-918006-70
Sales@plurainc.com

GERMANY



Plura MEA
Ph: +971-50-715-9625
Sales@plurainc.com



Plura Asia
Ph: +82-10-6688-8826
Sales@plurainc.com

S. KOREA

